



BCSC

User Manual

bluechip
Clear Innovative Precision

Contents

1 Foreword	4
2 Safety Precautions	4
3 Specifications and Keys	6
3.1 Appearance	7
3.2 Keys	7
3.3 Status Icons	9
3.4 LCD Backlight	9
4 Quick Introduction	9
4.1 Remove Battery Cover & Insert the SIM Card	9
How to Install the SIM Card	9
SIM Card Precautions	9
4.2 Installing the Battery	10
4.3 Charge/Recharge the Battery	10
4.4 Use of Battery	11
Battery Power Notes	11
4.5 Turning the Phone On or Off	12
4.6 First Call	12
4.7 Use of Passwords	13
Phone Lock	13
PIN Code	13
PUK Code	14
PIN2 Code	14
Bar Password	14
5 General Functions	15
5.1 Dial a Number	15
International Call	15
Dial an Extension Number	15
Dial a Number using the Phonebook	15
5.2 Dial a SOS Number	15
5.3 Adjust Volumes	16
5.5 Answer a Call	16

5.6 Options during a Call.....	16
Call Holding.....	16
Answer a Second Call.....	16
Hold/Swap.....	17
Mute/Unmute.....	17
Handsfree.....	17
6 Menu Instructions.....	18
6.1 Phonebook.....	18
Search.....	19
Add New Contact.....	20
Edit.....	20
Delete.....	20
Copy.....	20
Settings.....	21
Speed Dial.....	21
Memory Status.....	21
6.2 SMS/Text Messages.....	21
Write Message.....	21
Inbox.....	22
Outbox.....	22
Drafts.....	23
Sent Messages.....	23
Broadcast Message.....	23
Message Settings.....	23
Text Message Settings.....	23
Service Message Settings.....	24
SIM Tool Kit.....	24
6.3 Call Center.....	24
Call History.....	24
Missed Calls/Dialled Calls/Received Calls.....	25
Delete Call Logs.....	25
Call Settings.....	25

6.4 Settings	25
Phone Settings	26
Time and Date	26
Schedule Power On/Off	26
Language	26
Pref. Input Method	26
Display	27
Flight Mode	27
Misc. Settings	27
Network Settings	27
Security Settings	28
SIM Security	28
Phone Security	28
6.5 User Profiles	29
6.6 Extras	30
Calculator	30
SOS Settings	31
FM Radio	31
Calendar	32
Alarm	32
Factory Default	33
7 Care Instructions	33
7.1 Maintenance	33
7.2 Battery Information	34
7.3 Disposal of Used Battery	34

1. Foreword

Thank you for purchasing this mobile phone. To get the best performance from your phone, please read this user manual carefully.

This model of mobile phone uses advanced technology. It allows communication signals to shift between single frequency mode and dual frequency mode.

This product also offers functions such as MIDI ringtones, Phonebook, Message, Alarms. It also features Calculator, FM Radio, Hearing Aid, Voice Calling Report, etc. which all help you use this phone at work or in everyday life and allows you to communicate in a more effective and convenient way.

Important Notices

You are strongly recommended to keep a separate written record of all the important data on the phone. The manufacturer assumes no responsibility for any data lost as a result of accidents, improper use, replacing batteries or any loss incurred by the third party which may arise from the use of this device. Our company reserves the right of amending the contents of this manual, and owns the right of final interpretation of the contents, as well.

2. Safety Precautions

- ▲ Please read through the following information carefully, and act in accordance with these rules, To prevent causing any danger or breaking any law.



Safe driving

- 1) Do not use the phone when driving. If you have to use the phone, use a personal hands-free kit.
- 2) Secure the phone safely in a phone stand. Do not put it onto any passenger seat or any place from which it may fall in, case of vehicle collision or emergency braking.



Turn off during a flight

Airplane flight is influenced by interference caused by mobile phones. It is illegal to use a phone on airplanes. Please turn off your phone during a flight.



Turn off within areas where blasting takes place

Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.



Turn off the phone when any dangerous substances are in the vicinity

Please turn off your phone when you are within a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.



In hospitals

Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment. Should you have any questions in this regard, please consult a related physician or medical equipment supplier.



Interference

Each and every phones performance may be affected due to radio interference.



Professional service

The phone must be installed or repaired by professionals. You may suffer a risk to yourself when you install or repair this phone personally, this also goes against the warranty rules.



Fittings and battery

You should use fittings and battery acknowledged by the phone manufacturer only.



Proper use

Please use the phone in the normal way. Do not touch the antenna unnecessarily after the phone is turned on.



Emergency call

You can make emergency calls by entering telephone number (999, etc.) to request for emergency help. Make sure that the phone is turned on and has service. Press the Send Key to call out, and report your position and what has happened briefly. Do not end the call without authorization.

Note: Like any other phone, this phone's specific features may not be supported by some networks whose coverage or wireless signalling is problematic (some network do not support emergency calling service by 999). Therefore, do not rely wholly on this phone in case of emergencies (such as medical first aid, etc.). Please consult your local network operator for verification.

3. Specification and Keys

Network Type: GSM850MHz / GSM900MHz / DCS1900MHz / Four Band

Talk Time: about 2-3 hours, subject to network and usage conditions. Dual SIM Card.

Standby Time : about 200-300 hours (depending on the network)

Battery Capacity: 800 mAh

3.1. Appearance



- | | |
|-------------------------|-------------------------------|
| 1. Flash light | 10. Right Key |
| 2. Earpiece | 11. Left Key |
| 3. Main Screen | 12. MIC |
| 4. Side/Vol Up Button | 13. Micro USB/Charger socket |
| 5. Side/Vol Down Button | 14. Battery Cover |
| 6. Up Key | 15. Flash Light On/Off Button |
| 7. Send/OK Key | 16. SOS Button |
| 8. End Key | |
| 9. Down Key | |

3.2. Keys and Buttons

This phone has the following keys:

Name	Annotations
Send/OK Key	Dial or answer a call. In Idle mode, press this key to open menu options. Use as a confirm key.

Name	Annotations
End Key	End a call. Hold to turn phone on or off In menus/functions press to return to idle mode.
Up/Down Key	Used to scroll the functions list in menus or in Phonebook. When editing, use to move cursor. In idle mode, press Up Key to Add new contact or set alarm In idle mode press to access contacts
Keypad	Used to input numbers, letters and some characters. When editing, press # to change the input method; press * to switch to the Symbol interface
Flash Light Button	Push button up or down to turn flash light on or off whether the phone is powered on or off
SOS Button	After initial set up when pressed- Alarm sounds and SOS number is dialled and SOS SMS message is sent.
Side/ Volume Button	Adjust the Volume

3.3 Status Icons

 Received signal strength

 Earphone

 International Roam

 Alarm on

 Call divert (Changing by line)

 Battery power level

Ring tone status:  --- Mute  --- Vibration

3.4 LCD Backlight

The backlight time duration and brightness on the display screen can be set. To adjust this select the Settings option in the main menu, select option 1 Phone Settings then Misc Settings. If you do not press any key after a certain period of time, the backlight will be turned off automatically when the set time duration expires.

4. Quick Introduction

4.1 Remove the Battery Cover and Insert the SIM Card

The SIM card stores your phone numbers, PIN (personal identification number), PIN2, PUK (PIN phone unlocking key), PUK2 (PIN2 unlocking key), IMSI (international mobile subscriber identity) codes and network information, as well as Phonebook and SMS (Message service) data, etc.

How to install SIM

- 1) On the backside of the phone, press the ridged part on the battery cover; pull down on battery cover to remove.
- 2) Locate the SIM card slot (labelled SIM1) insert the SIM card with the metal side facing down corresponding to the connectors. Note: The cropped corner of the SIM slot matches the card shape.

SIM Card Precautions:

- 1) Turn off the phone, and wait a few seconds before removing or inserting the SIM card again.
- 2) Handle the SIM card with care, as friction or bending can cause damage to the SIM card.
- 3) When the phone is not in use, please keep the SIM card in a place out of children's reach.
- 4) If an incompatible SIM card is inserted or the SIM card is damaged, the screen will display "No SIM Card" or "Insert SIM" after the phone is turned on. Take out the SIM card, check if it has been inserted correctly.
- 5) If the screen displays "SIM Card Damaged", please contact the network operator for repair.

4.2 Installing the Battery

- 1) Press ridged part and pull downwards on battery cover to remove
- 2) Place the battery into the cavity with the three gold columns on the battery touching the gold connectors in the phone and push the battery into place
- 3) Replace the battery cover, push up until tight.

4.3 Charge/Recharge the Battery

- 1) Find the charger socket on the side of the phone
- 2) Connect the charger via the charger socket, the shape of the plug must be consistent with the socket.

- 3) Connect the other end of the charger with power source. (Cable to USB port or USB plug supplied)
- 4) After charging has finished, switch off power and remove charger.

Notes:

If the remaining power in the battery is too low to turn on the phone, you need to charge the phone for a period of time, before the screen indicates the power level in the battery.

- 2) Make sure that the standard voltage and power source used is the rated voltage and power for the charger.
- 3) During the charging/recharging period, you may turn the phone on or off.
- 4) Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

4.4 Use of Battery

When the battery is low:

- 1) The battery low message displays.
- 2) The empty battery icon blinks.

Battery Power Notes

- 1) If the battery is not going to be used for a long time, please charge the battery fully before putting it away.
- 2) The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
- 3) If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.
- 4) Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after 2 or 3 complete charge and discharge cycles.

5) If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it maybe necessary to connect the charger then disconnect and reconnect it to begin charging the battery.

4.5 Turning Phone On or Off

- 1) Press and hold the End key and the phone will be turned on. The screen shows a Power-on display.
- 2) Enter the idle screen.
- 3) If set up. Enter your phone lock password when you are requested to do so, and press Send key to confirm.
- 4) Press and hold the End key to turn off the phone.

Note: The wallpaper screen is showed on the screen when the phone is switched on and remains in idle mode.

4.6 First Call

- 1) Insert the SIM card (first, turn off the phone and take out the battery). For detailed instructions on installation, please refer to "4.1 Remove the Phone's Back Cover and Insert the SIM Card".
- 2) Charge the phone's battery. Refer to "4.3 Charge/ Recharge the Battery".
- 3) Press & hold the End key to turn on the phone.
- 4) Enter the area code and telephone number on the keypad, and press the Send key to call.

Note: Before using the phone, be sure to insert an effective SIM card into the phone at first, and charge the battery.

4.7 Use of Passwords

Your phone and SIM card have multiple passwords, which help prevent your phone and SIM card from being used illegally.

Enter the correct password when you are requested to enter any of the passwords that are shown below , then press the Send key to confirm. If you enter a wrong password, please press the End key to delete the wrong password, before entering the correct numerals. You may use the Security Settings in Settings from the main menu to change the PIN code, PIN2 code and Phone Lock password.

Phone Lock

The phone lock password is used to prevent your phone from being used illegally. Usually, the phone lock password is supplied together with the phone by the manufacturer. The default is 1234.

After the phone is locked up, you will be requested to enter the phone lock password before turning it on again.

PIN Code

PIN code (4-8 digits) is used to prevent your SIM card from any unauthorized use. The PIN code is usually provided together with the SIM card by the network operator. If the PIN verification function is activated, then you will be requested to enter the PIN code every time when you turn on the phone. If you have entered a wrong PIN code for three times, the SIM card will be locked up.

Warning: Once you have entered your PIN codes wrongly for three times, the SIM card will be locked up, and not be unlocked until you enter your PUK code. The PUK code is usually kept by the network operator.

PUK Code

The PUK code (a password used to crack the PIN code, 8 digits) is used to crack a locked PIN code. The PUK code is provided together with the SIM card by the network operator. If not supplied, please contact your network operator. In case you have entered your PUK code wrongly for 10 times, then the SIM card will stop working; if this happens, please contact your network operator to replace your SIM card with a new one.

PIN2 Code

The PIN2 code (4-8 digits) is provided together with the SIM card, and used to set such functions as "Call Cost" and "Fixed Dial", etc. To find out if your SIM card supports such functions, contact your network operator. If you have entered your PIN2 code wrongly for 3 times, the PIN2 code will be locked up, and not be unlocked until you enter the correct PUK2 code.

PUK2 Code

The PUK2 code (a password to crack the PIN2 code, 8 digits) is used to unlock a locked PIN2 code. The PUK2 code is provided together with the SIM card by the network operator. If not supplied, please contact your network operator. If you have entered your PUK2 code wrongly for 10 consecutive times, you will be unable to use those functions that can not be activated without the PIN2 code. To use such functions, contact your network operator and replace the SIM card with a new one.

Bar Password

To activate barred dial, it is necessary to use the Call-bar password. When you apply for such a network function, acquire this password from your network operator.

5. General Functions

5.1 Dial a Number

1) In Idle mode, enter an area code and telephone number, and press the Send key and confirm call to dial the number. Press the End key to end the call.

International Call:

Press the "*" key twice, the screen shows a "+" symbol. Enter the country code, area code and telephone number, and press the Send key and confirm the call.

Dial an Extension Number:

After entering the operator's number, press the "*" key three times, the screen shows a "p" symbol, then enter the extension number, and press the Send key to confirm and call out.

Dial a Number using the Phonebook

1) In Idle mode, press the Send key to enter Main menu, select Phonebook and press the Send key to access the Phonebook List. You can search for your required contact by entering the initial letter of the name then using the Up & Down key to find your desired name.

2) Press the Send key to and select "call" to dial the number.

5.2 Dial SOS Number

1) Press and hold the SOS button for 3 seconds to start the function, it will send the SOS message to the phone of the first SOS number and then dial it. If the call fails, then the next saved number is called and so on.

If it connects successfully, it will switch to the loudspeaker mode automatically.

2) After the SOS function starts and you want to stop it, press and hold the End key to disconnect.

5.3 Adjust Volume

During a call, you can press the side Up or Down Volume button to adjust the volume directly.

5.4 Hearing Aid

Insert an earphone, press and hold the "0" key for about 3 seconds to start the audiphone function.

5.5 Answer a Call

1) When someone is calling you, the phone will give a ring tone or vibrate.

2) Press the Send key to answer the call.

3) To end the call, you can press the End key.

4) To turn down a call, you can press the End key.

Note: If the caller ID can be identified, the phone will show the telephone number of the caller (if this telephone number has been stored into your Phonebook, then the caller's name will be displayed).

5.6 Options During a Call

During a call, you can use multiple control functions.

Call Holding

If the network supports the Call Holding function, you can make another call when talking to someone:

1) Enter a number or select the phone number you desire from the Phonebook, press the Send key to make a second call.

Answer a Second Call

1) Press the Send key to answer the second call, and the first call (on line) is held automatically; please refer to "Hold/Swap" for further information.

2) Press the End key to turn down the second call, and continue with your current call.

Hold/Swap

When the first call is held, and you are answering a second call:

You can press the Send key to select "Swap" to switch them.

Mute/Unmute

This function can turn off or on the phone's microphone and other microphone connected.

The "Mute" function can prevent the person you are talking to from hearing your voice.

During a call, press the Send key to enter the Option list to select "Mute" to turn off , you can press the Send key again to select "Unmute" to turn it on

Hands-Free

This function turns off or on the phone's loudspeaker. During a call, press the Send key to enter the option list, select "Loudspeaker on". to turn on the loudspeaker. When the loudspeaker is on, press the Send key again to enter the option list and select "Loudspeaker off" to turn off the loudspeaker, and go back normal.

5.7 Input Methods

This product is easy and convenient to use, and allows you to enter English words, numerals, insert symbols. You can enter words in English, including any letter, numeral, punctuation mark or any special symbol into the phone.

Switch Input Methods

In the Editing mode, press the key "#" to switch the input method;

 When you use this input method, you press the letter key you desire:
Press once to enter the first letter.
Press twice to enter the second letter.
Proceed likewise.

 The same method as above.

 Press once to enter the first capital letter, then small letter.

Numeric Input

 When you use this input method, you can enter your desired numerals.

5.8 Keypad Lock

Enable this function from Settings in the main menu, Security Settings and then Auto Keypad Lock option. You can then set the time delay before the Keypad locks.

To unlock the phone press Send Key then the "*" Key.

6. Menu Instructions

The following content lists a brief explanation of each function that this phone offers.

6.1 Phonebook

- 1) In Idle mode, press the Send key to enter Main menu.
- 2) Press the Up/Down Key to find the "Phonebook", press the Send key to enter.
- 3) Press the End key to exit

The Phonebook can also be accessed directly by pressing the End key in Idle mode.

Search



This function allows you to browse the contact information stored in the Phonebook in alphabetic order by the initial letters of the names. Using this function, you can search for your desired number in Phonebook.

Select " Search" in " Phonebook" to enter the index list screen, press the key including the letter to display the relative information quickly, press the End key to clear the letter.

You can press Up/Down key to browse the items, press the Send key to enter the option list.

After pressing the Send key to enter the option list, you can proceed as follows:

- 1) View: See the name and numbers
- 2) Send Text Message: In the Options list, select "Send message" to enter the Edit Message page; meanwhile, your selected telephone number is automatically brought into the message and used as the telephone number of the recipient.
- 3) Call: Dial the phone number you selected
- 4) Edit: Edit the record.
- 5) Delete: Delete a contact.
- 6) Copy: If you have selected a telephone number in the Phonebook, select "Copy" to copy this number to the SIM card; if you have selected a telephone number in the SIM card, then select "Copy" to copy this number to the phone.
- 7) Move: If the concerned number is stored in the SIM card, then it will be moved onto the phone; if stored on phone, it will be moved into the SIM card.
- 8) Phonebook Settings: Gives you options for Preferred Storage, Speed Dial, Number information, Extra Numbers, options to Copy, Move or Delete all contacts.

Displays the occupied capacity and total capacity in Phonebook in the phone and those in the SIM card

Add New Contact

This function allows you to add a new number in Phonebook to either the SIM card or the phone. Proceed as follows:

- 1) Select "Add New Contact" in the Phonebook Menu
- 2) Preferred storage destination (SIM, Phone or All) can be selected in the Phonebook Settings options.
- 3) Select ADD and input the name first, and then the number.
- 4) If you enter anything wrong, please press the End key to clear them.
- 5) When information is entered press the Send key to save the new contact.

Edit

Allows you to amend existing contacts. Press End key to clear existing information and use keypad to enter new information. Press the Send key to confirm.

Delete

You can select Delete contacts One by One or Delete All in Phonebook Settings

Copy

This function allows you to duplicate a record from Phone to SIM card or from SIM card to Phone. You can Copy All in Phonebook Settings

Settings

Phonebook Settings: Gives you options for Preferred Storage, Speed Dial, My Number, Memory, Extra Numbers, options to Copy, Move or Delete all contacts

Speed Dial

First in Speed Dial option set up numbers and their corresponding keypad numeral (*,#,2-9). To call a Speed Dial number in Idle mode hold corresponding keypad numeral until it dials out.

Memory Status

Displays the occupied capacity and total capacity in Phonebook in the phone and those in the SIM card.

6.2 SMS

1) In Idle mode, press the Send key to enter Main Menu.

2) Press the Up\Down key to select " Messaging", press the Send key to enter the list screen to select option desired: Write Message, Inbox, Drafts Outbox, Sent Messages, Delete Messages, Broadcast Message, Message Settings and then press the send key to enter operation.

Write Message

When editing a message, you can press the key "#" to switch between the input methods.

First, enter the message content, press the " *" key to insert symbols, when message content has been entered, you can do the following:

Press the Send key; to select the following options:

(1) Send to: Allows you to send the message to a stored number or enter recipients number.

(2) Input method: Switch between input methods

- (3) Advanced: Allow you to insert stored number, names and bookmarks in the message.
- (4) Save to Drafts: Saves the message to drafts and outbox.

Inbox

When a new message is received or the message memory capacity is full, the  icon will be displayed on the top of the screen (If the message memory is full, the icon will be ). If the message memory is full, you cannot receive any new messages, please delete unnecessary messages if this happens

- 1) Select "Inbox" to enter, to view the received messages in the Inbox; the one which marked with an  icon are unread.
- 2) Press the Send key to read the current message.
- 3) When reading messages, press the Send key; to select the following options:
 - (1) View: Read the selected message.
 - (2) Reply by SMS: Send a reply message to sender.
 - (3) Call sender: Dials senders number.
 - (4) Forward: Send message on to another recipient.
 - (5) Delete: Delete selected message.
 - (6) Delete All: Delete all messages.
 - (7) Save to Phonebook: Save senders number to your phonebook.

Outbox

- 1) After entering the "Outbox", it displays those messages already sent out or unsent. Each message sent out is marked by a sent icon; and every message not sent successfully is marked by a not-sent mark.
- 2) Press the Send key to view the current message.
- 3) When reading a message, you can press the Send key to Resend, Edit, Delete or Use Number or Use USSD data.

Drafts

After entering Drafts, it displays the messages saved in Drafts. Press the Send Key to View, Send, Edit, Delete or Delete All.

Sent Messages

View, Edit and Delete sent out messages.

Broadcast Message

This network-based service allows you to receive various kinds of text messages regarding weather conditions or traffic news, etc. For details, please contact your network operator.

- 1) Receive Mode: Switch service on and off
- 2) Channel settings
- 3) Languages: This network based service allows you to select a desired language to display the broadcast information
- 4) Read Messages: Read received messages

Delete Messages

You can select to delete all messages from the Inbox, Drafts, Outbox, Sent Messages, All Messages Delete All, Delete Inbox, Delete Outbox you will be asked to confirm deletion or press the End key to cancel.

Message Settings

Includes Text Message options and Service Message options.

Text Message Settings

- 1) Profile settings: Select a personalised Profile. You can customize display of contacts, validity period, and message type - Text, Fax or email.

- 2) Voicemail Server: Listen to and edit voicemail settings.
- 3) Common Settings: Options for Delivery Reports, Reply Path and Saving Sent Messages.
- 4) Memory Status: Views the memory capacity occupied by Messages, and total capacity of the SIM card and Phone. The final capacity is determined by the content of the Messages, Phone and SIM card.
- 5) Preferred Storage: You can set where the messages are to be saved (SIM or Phone).

Service Message Settings

Enable service loading and push options.

SIM Tool Kit

If your network operator offers such a service and you have subscribed for it, you will be able to use this function. If you insert a SIM card with a value-added (STK) function, you can use your this service after selecting the STK service function.

6.3 Call Center

In Idle mode press Send Key to enter main menu, press the Up/ Down key to find "Call Centre" use Send key to access Call History and Call Settings options.

Call History

- 1) In Idle mode, press the Send key to enter Menu.
- 2) Press the Up/Down key to find "Call Center" and press the Send Key to enter..
- 3) Press the Up/Down key to find "Call History", press the Send Key to enter.
- 4) Press the Send Key to access Call History options: Missed Calls, Dialed calls, Received Calls, Delete Call Logs,

Missed Calls/Dialled Calls/Received Calls

After entering this function, press Up/Down key to browse the records, you can press the Send key to select from the options: View, Call, Send Text Message, Edit Number before Calling and Delete.

Delete Call Logs

You can delete the record of: Dialled calls, Missed calls, Received calls or All calls.

Call Settings

- 1) In Idle mode, press the Send key to enter Menu.
- 2) Press the Up/Down key to find "Call Center" and press the Send Key to enter..
- 3) Press the Up/Down key to find "Call Settings", press the Send Key to enter.
- 4) Press the Send Key to access SIM Call Settings and Advanced Settings

SIM Call Settings

After entering this function, press Up/Down key to set up the settings for: Call Waiting, Call Divert, Call Barring and Line Switching.

Advanced Settings

After entering this function, press Up/Down key to set up the settings for: Auto Redial, Call Time Reminder and Answer Mode.

6.4 Settings

In Idle mode press Send Key to enter main menu, press the Up/ Down key to find "Settings" use Send key to access Phone Settings, Network Settings, Security Settings and Restore Factory Setting options.

Phone Settings

After entering this function, press Up/Down key to browse the settings, you can press the Send key to select from the options: Time and Date, Schedule Power On/Off, Language, Preferred Input Method, Display, Flight Mode and Misc. Settings.

Time and Date

Accessed from Phone Settings option in Settings on the main menu.

1) Set Home City

Select your city to confirm your time zone

2) Date & Time Settings:

You can set time and date in here

3) Set Format:

You can set a 12-hour system or a 24-hour system.

You can set the date format. DD means date, MM means month, and YYYY means year.

Schedule Power On/Off

Accessed from Phone Settings option in Settings in the main menu. Schedule time for automatic power on/off.

Language

Accessed from Phone Settings option in Settings in the main menu. Display optional languages. You can select English, French, Spanish, Italian and German and then press the Send key to confirm.

Pref. Input Method

Accessed from Phone Settings option in Settings in the main menu. You can press the Up/Down key to select one of the input methods as the default, and then press the Send key to confirm.

Display

Accessed from Phone Settings option in Settings on the main menu.

1) Wallpaper: Select a file to be used as a background on Idle screen. Choose from either system files or user defined image stored on the phone.

2) Screen Saver. Select a file to be used as a background on the screen when the phone is not in use. Choose from either system files or user defined image stored on the phone. Switch this feature on or off from this menu

3) Show Date and time on Idle screen.

Flight Mode

Accessed from Phone Settings option in Settings in the main menu. Put the phone into flight mode for use while travelling.

Misc. Settings/LCD Backlight

Accessed from Phone Settings option in Settings in the main menu. Set Brightness and Time duration for screen's LCD backlight.

Network Settings

After entering this function, press Up/Down key to browse the settings, you can press the Send key to select from the options: Network Selection and Preferences.

Network Selection

Accessed from Network Settings option in Settings in the main menu. You can set "Automatic" (preferred) or "Manual". When you select " Automatic" ,the phone will select the network corresponding to the SIM card.

When you select "Manual", you must select that network which the SIM card has been registered to. You can also search for available Networks.

Preferences

Accessed from Network Settings option in Settings in the main menu. Record of preferred networks.

Security Settings

After entering this function, press Up/Down key to browse the settings, you can press the Send key to select from the options: SIM Security, Phone Security and Auto Keypad Lock.

SIM Security

Accessed from Security Settings option in Settings in the main menu.

1) PIN Lock:

You can choose On or Off, and you can

2) Change PIN

If you have set the SIM Lock as "On", every time when you turn on the phone, you have to enter the PIN code. If you have entered a wrong code three times, you will be requested to enter the PUK code (personal unlocking key). The PUK code is used to unlock and change the locked PIN code. If the PUK code is lost or not supplied at please contact your network operator.

2) Change PIN 2:

You can change PIN 2 code. If you don't know the PIN 2 code, please contact your network operator.

Phone Security

Accessed from Security Settings option in Settings in the main menu.

You can choose On or Off and you can also change Phone password. By using function, you can lock or unlock your phone. To do so, enter the password to lock or unlock. When your phone is locked, you will be requested to enter the phone lock password when turning on the phone.

The default password is 1234.

6.5 User Profiles

In Idle mode press Send Key to enter main menu, press the Up/ Down key to find "User Profiles" use Send key to access Profile options. These include: General, Silent, Meeting, Outdoor and My Style.

Use Up/Down key to select preferred profile then Send Key to access the profiles options.

1) Activate

Select the "Activate" and then press the Send key to activate the default settings.

2) Customize

This options includes Alert Type, Ring Type, Incoming Call Tone, Ringtone Volume, Message Tone, Message Tone Volume, Keypad Tone, Keypad Volume, Power On/Off Tone and System Alert.

(1) Alert Type: You can select Silent (no tone) or Ring only

(2) Ring type: You can select Repeat, Ascending or Beep Once. Repeat: the ring tone repeats uninterrupted. Ascending: The ring tone gradually increases in volume. Beep Once: The tone is only heard once.

(3) Incoming Call: You can select your desired tone as the incoming call ring.

- (4) Ring Tone Volume: Press the Up or Down key to adjust.
- (5) Message: You can select your desired tone as SMS alert tone.
- (6) Message Volume: Press the Up or Down key to adjust the volume.
- (7) Keypad: You can select Tone, Human Voice or Click. Tone: A tone/beep is heard when pressing keypad. Human Voice: Numbers are spoken when keypad is pressed. Click: No additional sound is added to the keypad whilst pressing keys.
- (8) Keypad Volume: Press the Up or Down key to adjust the volume when tone is selected for Keypad option.
- (9) Power On: Select preferred tone that sounds when phone is switched on.
- (10) Power Off: Select preferred tone that sounds when phone is switched off.
- (11) System Alert: Turn system alerts on or off.
- 3) Reset: Restore selected profile to default settings.

6.6 Extras

In Idle mode press Send Key to enter main menu, press the Up/ Down key to find "Extra" use Send key to access Extra Functions.

Calculator

Accessed from Extra option in the main menu. You can operate the calculator by inputting the numbers using the keypad (press "#" to enter the decimal point), then press the Up, Down, Left, Right Keys to select the plus (+), minus (-), division (/), or multiplication (x), press the Send key to solve the equation.

SOS Setup

Accessed from Extra option in the main menu.

1) On/Off:

You can select On or Off for SOS setting.

2) Emergency Number:

In the SOS Number list, you can press the Send key to enter what numbers you want dialled or Delete old numbers.

3) SOS Message:

You can edit the message to be sent when SOS button is pressed.

4) SMS Reminder:

Press Up/Down key to select On or Off, press the Send key to confirm.

5) Code Set.

FM Radio

This is FM radio. Enter the FM radio interface, press the Down key turn on/off. Press the Left or Right to search the channel. Press the left side Up or Down button to adjust the volume. Press the End key to exit. On the FM Radio interface, press the Send key to access the following options:

1) Channel List: If you have already saved the radio channels, you can move the cursor to the channel you would like to listen to and play it. You can also select Edit in the options to edit the list.

2) Manual Input: Use the keypad to manually enter the Frequency of the channel you desire. If you know the frequency of the radio channel you would like to listen to, enter the frequency and press the Send key to listen. When editing the frequency, press the Left and Right to move the cursor.

3) Auto Search: The radio can automatically search

and save channels.

4)Settings/Background Play: Enter the background play mode.

Calendar

Accessed from Extra option in the main menu. Calendar shows monthly overview with date highlighted. Access Time and Date options from the Phone Settings option in Settings in the main menu.

Alarm

Accessed from Extra option in the main menu. If the Alarm is not turned on, then no alarm will sound even when the set time comes. If the Alarm is turned on an alarm will be given even if the phone is turned off. Please follow these steps to set an alarm:

1) Press the Up/Down key to select an alarm, press the Send key to enter either a pre-set alarm type or edit options. Use Left/Right keys to select ON. Press the Up or Down key to move the cursor to next option.

2) Set the time when the alarm is triggered .

Press the number key to input the time. Use the 24hr clock to ensure correct alarm time.

3) Select the repeat type: Once, Everyday or Custom. If you select "Custom", you can select which days with Left/Right keys and using the send key to turn them on and off. Press the End to save.

4) Snooze: Set length of time between alarm tones in snooze mode. When an alarm sounds, if you select snooze or do nothing to stop the alarm, the clock will assume that you have not heard the alarm, after a while, it will alarm sound again, but snooze function will stop after 3 alarm repeats.

5) Alert type: Set type of alarm. Ring is recommended.

Factory Default

Select " Settings— > "Restore Factory Settings", enter the phone lock password to activate this function.

7 Care Instructions:

7.1 Maintenance

- Keep the phone and all of its fittings in a place out of children's reach.
- Keep the SIM card in good condition. Do not bend or scrap it; be sure to avoid interference from static electricity. Use a piece of cloth that is static electricity proof, and contains no chemical detergents, to clean the SIM card.
- Avoid exposing the phone to moisture and shaking. Do not put it in directly sunshine. Liquid will cause corrosion of the metal in the electric circuits; and heat will shorten the life of the electronic component parts and damage the battery.
- Phone ID: when you have lost your phone or SIM card, the following information is important and should be recorded: SIM card serial number (marked on the card); phone serial number (15-digit), and client number given by the network operator.
- If you have lost your phone or SIM card, please contact your network operator immediately, to prevent any other person from using your phone illegally.
- If the phone is not in use for a long time (more than one month) after being turned off, please remove the battery from the phone, to avoid any electric leakage from the battery that can damage the phone. If the battery is not in use for a long time (or has discharged its power) use the mains charger. Cable or travel chargers may not work.

7.2 Battery Information

- Do not throw the battery into fire.
- Do not dismantle or retrofit the battery.
- Do not put the battery into any unauthorized device.
- Do not put the battery in any place where powerful mechanical impacts take place, or perforate the battery.
- The battery shall be kept in a cool and dry place, and away from high and exposure to direct sunshine.
- Do not use the lithium battery in a rather cold environment, as the battery is will not power for its maximal Standby/Call Time.
- Do not clean the battery by use of water or any organic solvent, or put the battery into water.
- Be sure to stop using the battery in case it gives out any peculiar smell or gets excessively hot.
- Be sure to stop using the battery if it suffers any crack, deformation, damage of any other type or any leakage.
- If any leaked battery fluid is splashed onto skin or clothes, rinse it off by using soap and clean water immediately; if any leaked battery fluid is splashed into eyes, rinse your eyes using clean water immediately and contact a hospital for medical treatment.
- Be sure to use the supplied battery and charger to avoid any damage to the phone caused by any erroneous charging.
- Turn off the phone before removing the battery.

7.3 Disposal of Used Battery

When the battery in the phone can not be used anymore, please replace it with a new one, and keep the old battery in a proper place, before handing it to the correct organization for disposal.

For information about the
range of mobile phones and
other accessory products in
the Bluechip range log onto
www.bluechipworld.biz

bluechip
Clear Innovative Precision