




Doro PhoneEasy® 505

English

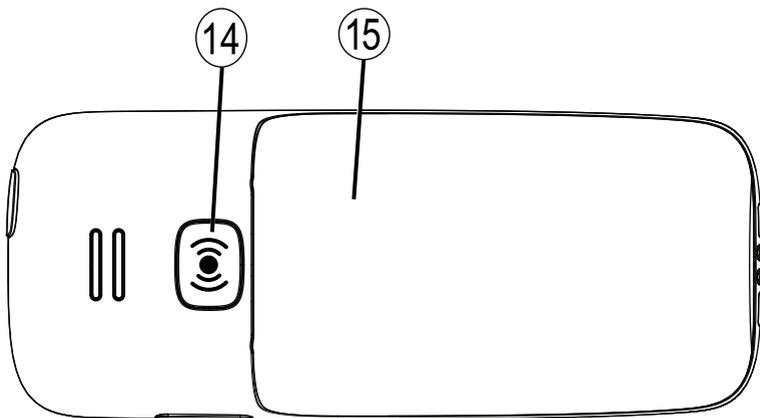

doro 

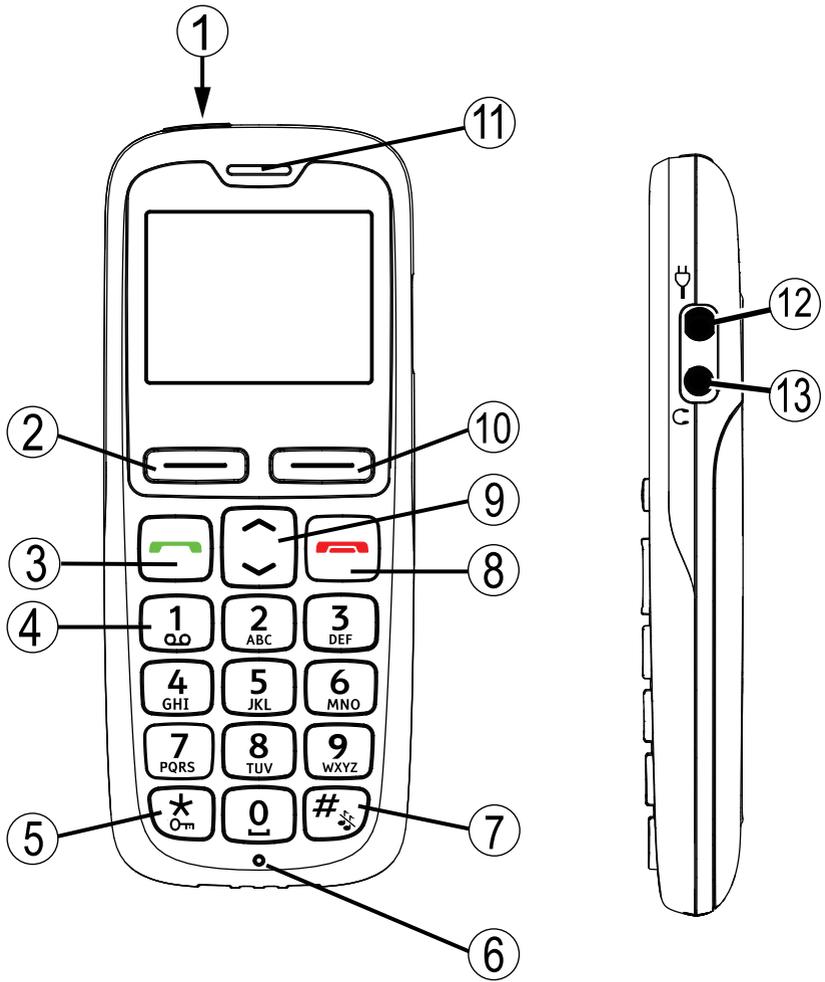

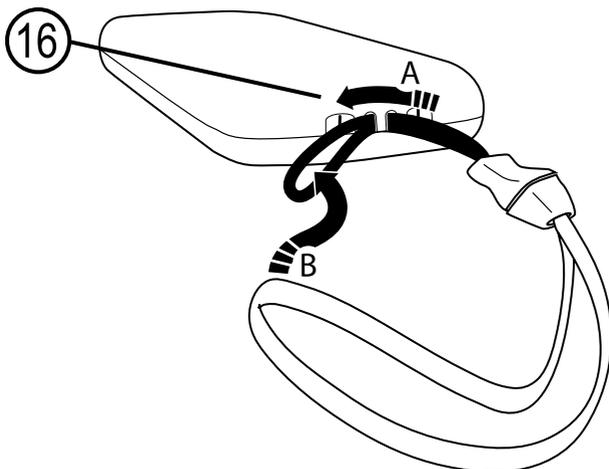

English

1. Power on/off
2. Left soft key
3. Call key
4. **1** / Voice mail
5. ***** / Key lock
6. Microphone
7. **#** / Silent / Input method
8. End call
9. Arrow keys
10. Right soft key
11. Loudspeaker
12. Charging socket
13. Headset socket
14. Emergency key
15. Battery cover
16. Lanyard (not included)

Contents

| | |
|---|----|
| Installation | 1 |
| Installing the SIM card and the battery | 1 |
| Charging | 2 |
| Symbols | 3 |
| Assistive functions | 3 |
| Display status symbols | 3 |
| Display main symbols | 3 |
| Operation | 5 |
| Activating the phone | 5 |
| Making a call | 6 |
| Making a call from the Phonebook | 6 |
| Receiving a call | 6 |
| Volume control | 6 |
| Entering text  | 6 |
| Call options | 8 |
| Call waiting | 9 |
| Call information | 9 |
| Speed dial  | 9 |
| Silent | 9 |
| Headset | 9 |
| Key lock | 9 |
| SOS calls | 10 |
| Emergency key | 10 |
| Phonebook | 12 |
| Creating a phonebook entry | 12 |
| Managing phonebook entries | 12 |
| Messages | 14 |
| Creating and sending messages | 14 |
| Inbox/Outbox | 15 |
| Call log | 16 |
| Retrieving and dialling | 16 |
| Settings | 17 |
| Time & date | 17 |
| Tone settings  | 18 |
| User setup | 19 |
| Silent | 21 |

| | |
|---------------------------------------|----|
| Block function | 21 |
| Emergency | 22 |
| Voice mail | 23 |
| Speed dial..... | 24 |
| Call setup..... | 25 |
| SMS settings..... | 26 |
| Network setup | 27 |
| Services | 28 |
| Security | 28 |
| Additional functions..... | 30 |
| Alarm..... | 30 |
| Calendar | 31 |
| Calculator..... | 32 |
| Instructions for the REMOTE USER..... | 33 |
| Troubleshooting | 36 |
| Safety instructions..... | 37 |
| Network services and costs | 38 |
| Operating environment | 38 |
| Medical units | 38 |
| Areas with explosion risk | 39 |
| Li-ion battery..... | 39 |
| Protect your hearing..... | 39 |
| Emergency calls..... | 40 |
| Vehicles | 40 |
| Care and maintenance | 41 |
| Warranty | 41 |
| Specifications | 41 |
| Specific Absorption Rate (SAR)..... | 42 |
| Declaration of Conformity | 42 |


Installation

IMPORTANT!

Turn off the phone and disconnect the charger before removing the battery cover.

Installing the SIM card and the battery

The SIM card holder is located behind the battery.

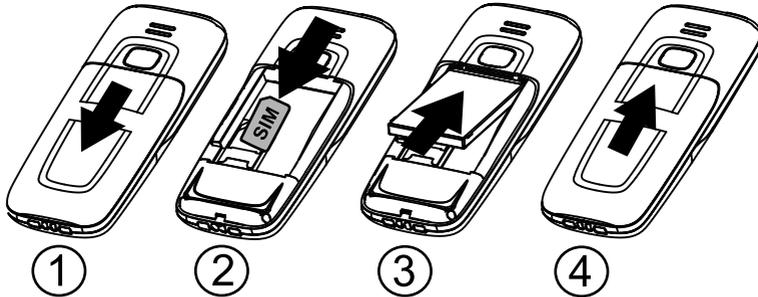

1. Remove the battery cover and the battery, if it is already installed.
2. Insert the SIM card by gently sliding it into the holder. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is pointing upwards. Take care not to scratch or bend the contacts on the SIM card.
3. Insert the battery by sliding it into the battery compartment with the contacts facing upwards to the right.
4. Replace the battery cover.

Charging

CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low,  is displayed and a warning signal is heard. To charge the battery, connect the mains adapter to a wall socket and to the charging socket .

 is displayed briefly when the charger is connected to the phone, and  when it is disconnected. The battery charge indicator will be animated while charging. It takes approximately 3 hours to fully charge the battery.

 is displayed on the screen when charging is completed. If the phone is turned off when the charger is connected to the phone only the battery charge status indicator will be shown on the display.

Note!

To save power the LCD backlight goes off after a while. Press any key to illuminate the display. Full battery capacity will not be reached until the battery has been charged 3–4 times. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use.

Save energy

When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet.

Symbols

Assistive functions

The following symbols indicate information in the manual about assistive functions for:

| | | | |
|--|---------|---|----------|
|  | Seeing |  | Handling |
|  | Hearing |  | Safety |

Display status symbols

| | | | |
|--|----------------------------|---|-------------------|
|  | Signal strength |  | Missed call |
|  | Ring only |  | Keylock on |
|  | Ring + vibration |  | Headset connected |
|  | Vibration only |  | Alarm active |
|  | Light only (silent) |  | Battery level |
|  | Roaming (in other network) |  | New message |

Display main symbols

| | | | |
|--|-------------------------------|---|-----------------|
|  | Insert SIM |  | Charger removed |
|  | SIM card damaged or not valid |  | Charger connect |
|  | SOS calls only |  | Headset in |
|  | Keylock off |  | Headset out |
|  | Keylock on |  | Speaker on |
|  | New message |  | Speaker off |
|  | Error |  | Incoming call |
|  | Warning |  | Outgoing call |
| | Query | | Missed call |

English

| | | | |
|--|-------------------|---|--------------|
|  | Done (confirmed) |  | Call ended |
|  | Battery level low |  | Call on-hold |
|  | Searching |  | Mute |

Operation

Activating the phone

Press and hold  on the top of the phone to turn it on/off. The following messages may be displayed:

| | |
|---|--|
|  | SIM card missing or incorrectly inserted |
|  | SIM card damaged or not valid |

If the SIM card is valid but protected with a PIN code (Personal Identification Number), **PIN:** is displayed. Enter the PIN code and press **OK** ( upper left corner of keypad). Delete with **Clear** ( upper right corner of keypad).

Note!

If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, **PIN blocked** is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

1. Enter the PUK code and confirm with **OK**.
2. Enter a new PIN code and confirm with **OK**.
3. Re-enter new PIN code and confirm with **OK**.

Standby (Idle mode)

When the phone is ready to use, and you have not keyed in any characters, the phone is in standby.

Left soft key in standby is **Menu**.

Right soft key in standby is **Name**.

Tip:

You can always press  to return to standby.

Changing the language, time and date

The default language is determined by the SIM card. See [Settings/User setupLanguage, p.20](#) on how to change language, time and date.

Making a call

1. Enter the phone number including the area code. Delete with **Clear**.
2. Press  to dial. Press **Abort** to cancel dialling.
3. Press  to end the call.

Tip:

When making international calls, always use **+** before the country code for best operation. Press  twice for the international prefix **+**.

Making a call from the Phonebook

1. Press **Name** to open the **Phonebook**.
2. Use the arrow keys / to scroll through the Phonebook, or quick search by pressing the key corresponding to the first letter of the entry, see [Entering text](#) , p. 6 .
3. Press **Call** to dial the selected entry, or press **Back** to return to standby mode.

Receiving a call

1. Press  to answer, or press **Silent** to switch off the ring signal and then **Reject** to reject the call (busy signal). Alternatively, press  to reject the call directly.
2. Press  to end the call.

See also [Settings/Call setup](#), p.25.

Volume control

Use the arrow keys / to adjust the sound volume during a call. The volume level is indicated on the display. If you use hearing aid or have hearing difficulties when using the telephone in noisy environment, you can customize the phone's audio settings, see [Settings/User setup/Audio setup](#) , p.21.

Entering text

Text is entered by pressing the numerical keys repeatedly to select characters. Press the key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.

Press  for a list of special characters. Select the desired character with / and press **OK** to enter it.

Use / to move the cursor within the text.

Press **#** to cycle upper case, lower case and numerals.

Entering text with Predictive text

Press each key **once**, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed. See [Settings/SMS settings/Predictive text, p.26](#) on how to activate predictive text.

1. To write the word “**Fred**”, press **3**, **7**, **3**, **3**. Complete the word before looking at the suggestions.
2. Use / to view the suggested words.
3. Press **Select** and continue with the next word.
Alternatively, press **0** to continue with the next word.

If none of the suggested words are correct, press **#** to change to manual input mode. The icon on the top left of the display indicates the input mode:

| | |
|----------------|------------------------------------|
| eZi Abc | Sentence case with predictive text |
| eZi ABC | UPPER CASE with predictive text |
| eZi abc | lower case with predictive text |
| Abc | Sentence case |
| ABC | UPPER CASE |
| abc | lower case |
| 123 | numerals |

Note!

The selected menu language determines the available input methods.

Call options

During a call the soft keys¹ give access to additional functions:

Options (left soft key)

A menu with the following options is displayed:

| | |
|-------------------------|---|
| Hold single call | Hold the current call |
| End single call | End the current call (same as ) |
| New call | Call another number (Conference) |
| Phonebook | Search the phonebook |
| Msg centre | Write or read SMS messages |
| Mute | Disable the microphone |

SPK on (right soft key)

CAUTION

Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

Activates handsfree mode, which allows you to speak without holding the phone. Speak clearly into the microphone at a maximum distance of 1 meter. Use / to adjust the loudspeaker volume. Press **SPK off** to return to normal mode.

Note!

The handsfree function allows only one person at a time to talk. Switching between talk/listen is triggered by the sound of the person talking. Loud noises (music, etc.) in the background may interfere with the function.

1. Soft keys have multiple functions. The current key function is shown above the soft key on the display.

Call waiting

An alert tone will be heard if there is an incoming call while talking. To put the current call on hold and answer the incoming call, press

Options.

Tip:

Call waiting must be activated, see [Call setup/Call waiting, p.25](#).

Call information

During a call, the outgoing or incoming phone number and the elapsed call time is displayed. If the identity of the caller is withheld, **Unknown** is displayed.

Speed dial

You can use the numerical keys **0** and **2 – 9**. When you have stored a speed dial, you simply press and hold corresponding key to call your contact. See also [Settings/Speed dial, p.24](#).

Silent

Silent is a fixed profile with Keypad tone, Message tone and Ring tone disabled, while Vibration and Alarm are unchanged.

Tip:

*Press and hold shortcut key **#** to activate/deactivate Silent.*

Headset

When a headset is connected, the internal microphone in the phone is automatically disconnected.

When receiving a call you can use the answer key on the headset cable (if it has one) to answer and end calls.



CAUTION

Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset.

Key lock

You can lock the keypad to prevent the keys being accidentally pressed, for example, when your phone is in your handbag.

Press and hold  on the phone to lock/unlock the keypad. See [Settings/Security/Auto keylock, p.28](#) for key lock options.

Incoming calls can be answered by pressing  even if the keypad is locked. During the call, the keypad is unlocked. When the call is ended or rejected, the keypad is locked again.

Note!

The main local emergency numbers (SOS numbers) can be dialled without unlocking the keypad.

SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information.

Emergency key



CAUTION

When an emergency call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

The Emergency key allows you easy access to contact predetermined numbers should you need help.

To make an emergency call, press and hold the Emergency key on the back of the phone for 3 seconds, or press it twice within 1 second. The phone will send a message to all phone numbers in the numbers list. The phone will then dial the first number on the list. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until  is pressed.

The Emergency function must be activated before use. See [Settings/Emergency, p.22](#) on how to activate the function as described above or with 3 key presses, how to enter contacts in the numbers list, and how to edit the message.

The Emergency function can also be configured so that the recipient of the call must press "0" (zero) to confirm the emergency call, in order to stop the alarm sequence.

If there is a risk that the emergency call will be answered by a voice mail/answering service, please activate the function Confirm with "0". See [Settings/Emergency, p.22](#).

Note!

Automatic calls to emergency numbers (e.g. 112, 999, 911 or other official emergency numbers) are normally not allowed. Do not save emergency numbers in the list of numbers to be called automatically. Some private security companies can accept automatic calls from their clients. Always contact the security company before using their phone number.

IMPORTANT!

Information to the recipient of an Emergency call, when Confirm with "0" is activated.

After receiving the emergency message, each number in the Numbers list will be called sequentially.

To confirm the emergency call, the recipient need to press **0**.

If the recipient doesn't press **0** within 60 seconds the call will be disconnected and the next number in sequence will be called.

If the recipient press **0** within 60 seconds, the call is confirmed and no further call attempts will be made (emergency sequence interrupted).

Phonebook

The Phonebook can store 100 entries with 3 phone numbers in each entry.

Creating a phonebook entry

1. Press **Menu**, scroll to  and press **OK**.
2. Select **-New contact-** and press **Add**.
3. Enter a  **Name** for the contact, see [Entering text](#) . Delete with **Clear**.
4. Use / to select  **Mobile**,  **Home** or  **Office**, and enter the phone number(s) including the area code, then press **Save**.
5. Press  to return to standby mode.

Tip:

When making international calls, always use **+** before the country code for best operation. Press  twice for the international prefix **+**.

Managing phonebook entries

1. Press **Menu**, scroll to  and press **OK**.
2. Select a contact and press **Options**.
3. Select one of the following options and press **OK**:

View

Show details for the selected contact.

Edit

1. Use / to move the cursor. Delete with **Clear**.
2. Press **Save**.

Add new

See [Creating a phonebook entry](#).

Call

Press **OK** to call the contact.

Send SMS

Press **OK** to write a SMS message, see [Creating and sending messages](#).

Top 10 setting

Set the entry as one of the first 10 contacts listed in the **Phonebook**.

1. Select one of the empty entries and press **Add**.
2. Use / to scroll through the **Phonebook**, or quick search by pressing the key corresponding to the first letter of the entry.
3. Press **OK** to save the selected entry, or press **Back** to return to the menu.

To delete a Top 10 entry, select the entry in the Top 10 list and press **Options**, then **Delete**.

Delete

Press **OK** to delete the selected phonebook entry. Press **Yes** to confirm or **No** to abort.

Delete all

Select **From SIM** or **From phone** and press **OK** to delete all phonebook entries from the SIM card or phone memory.

Enter the phone code and press **OK** to confirm. The default phone code is **1234**.

Copy all

Select **From SIM** and press **OK** to copy all phonebook entries from the SIM card to the phone memory. Press **Yes** to confirm or **No** to abort.

Select **From phone** and press **OK** to copy all phonebook entries from the phone memory to the SIM card. Press **Yes** to confirm or **No** to abort.

Storage

Select **Phone** (default) or **SIM** and press **OK** to select storage for new phonebook entries.

| | |
|--------------|---|
| SIM | 1 phone number per contact. Number and length of the phone numbers/contacts that can be stored will vary depending on SIM card/service provider preferences |
| Phone | 100 contacts with 3 phone numbers each Mobile, Home or Office |

Send vCard

Select **Send by SMS** and press **OK** to send the selected phonebook entry as a vCard via SMS. Enter the phone number of the recipient (or press **Search**) and press **OK** to send.

Messages

Creating and sending messages

Note!

Before you can send any messages, you need to save your message centre number. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself. See [Settings/SMS settings/Profile set, p.26](#).

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Write message** and press **OK**.
3. Type your message, see [Entering text](#) , [p. 6](#), then press **Done**.
4. Select one of the **Send options** and press **OK** to confirm:

| | |
|------------------------|--|
| Save & send | Send the message and save it in the Outbox |
| Send only | Send the message without saving |
| Send to many | Add more recipients for the message |

If Send to many was selected, do the following:

1. Select an **Empty** entry and press **Edit**.
2. Enter a phone number or press **Search** to open the **Phonebook**. After entering or selecting a number, press **OK**.
3. Repeat steps 1 – 2 to add additional recipients. When finished, press **Done**.

Note!

If you choose to add multiple recipients, you will be charged for each recipient (maximum 10).

When making international calls, always use + before the country code for best operation. Press  twice for the international prefix +.

Inbox/Outbox

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Inbox/Outbox** and press **OK**.
3. Select a message and press **Read**.
Use / to scroll the message up/down.
4. Press **Options**.

Send

Select one of the Send options and press **OK** to confirm.

Reply

Type your reply, then press **Done**. The message will be sent immediately.

Call

Press **OK** to call the contact.

Delete

Press **Yes** to delete the message, or **No** to return.

Edit

Edit the message, then press **Done** to show the Send options.

Forward

Forward a message. Press **Done** to show the Send options.

Delete all

Press **Yes** to delete all messages. Press **No** to return.

Use number

Displays all phone numbers contained in the message as well as the sender's number.

| | |
|-----------------|----------------------------------|
| Call | Call the selected number |
| Save | Save the number in the Phonebook |
| Send SMS | Write a new SMS message |

Call log

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

Retrieving and dialling

- Press .
Alternatively, press **Menu**, scroll to  and press **OK**.
- Use / to scroll through the **Call log**.
 -  Incoming call
 -  Outgoing call
 -  Missed call
- Press  to dial the number or press **Options** for the following settings:

| | |
|-----------------------|---|
| View | Show details for the selected call |
| Delete | Delete the call |
| Delete all | Delete all calls in the Call log |
| Save | Save the number in the Phonebook |
| Call time | Call time counter |
| Last call | Show the elapsed time of the most recent call |
| Dialled calls | Show the elapsed time of all dialled calls |
| Received calls | Show the elapsed time of all received calls |
| Reset all | Press Yes to reset the timer, or No to return |

Settings

Note!

The settings described in this chapter are carried out in standby mode. Press  to return to standby mode.

Time & date

Setting the time and date

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Set time** and press **OK**.
4. Enter the time (**HH:MM**), then press **OK**.
5. Select **Set date** and press **OK**.
6. Enter the date (**DD/MM/YYYY**), then press **OK**.

Setting the time/date format

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Set format** and press **OK**.
4. Select **Time format** and press **OK**.
5. Select **12 hours** or **24 hours** and press **OK**.
6. Select **Date format** and press **OK**.
7. Select the desired date format and press **OK**.

Setting Auto time on/off

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Time & date** and press **OK**.
3. Select **Auto time** and press **OK**.
4. Select **On/Off** and press **OK**.

To set the phone to automatically update the time and date according to the current time zone, select **On**. Automatic update of date and time does not change the time you have set for the alarm clock or the calendar. They are in local time. Updating may cause some alarms you have set to expire.

Tone settings

Note!

Silent needs to be set to **Off** to access Tone settings. See [Silent, p.21](#).

Tone setup

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Tone setup** and press **OK**.
4. Select **Ring tone** and press **OK**.
5. Scroll / to select one of the available melodies, the melody will be played. Press **OK** to confirm, or press **Back** to discard changes.
6. Set up the **Alarm**, **Power on**, **Power off**, **Message tone** and **Keypad tone** in the same way.

Ringtone Volume

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Volume** and press **OK**.
4. Scroll / to change the ring volume, then press **OK**.

Alert type

Incoming calls can be signalled by a ring tone and/or vibration or by light only.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Alert type** and press **OK**.
4. Scroll / to select signalling mode, then press **OK**.

| | |
|-----------------------|--|
| Ring only | Ring tone only |
| Vib. only | Vibration only |
| Vib & ring | Vibration and ring tone |
| Vib->ring | Starts with vibration and adds ring tone after a short while |
| Light only | No sound or vibration, the display light is lit |

Extra tone

Warning and error tones are used to alert you of low battery power, phone and SIM card errors, etc.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Tone settings** and press **OK**.
3. Select **Extra tone** and press **OK**.
4. Select **Warning** and press **On/Off** to enable/disable.
5. Select **Error** and press **On/Off** to enable/disable.
6. Press **Done** to save.

User setup

Wallpaper

You can select different display backgrounds.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Wallpaper** and press **OK**.
4. Scroll / to display available wallpapers.
5. Press **OK** to confirm or **Back** to discard changes.

Themes

You can select different themes to personalise the phone's texts and background.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Themes** and press **OK**.
4. Scroll / to select a theme.
5. Press **OK** to confirm or **Back** to discard changes.

Idle display

In standby mode the display can show clock only, or all information.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Idle display** and press **OK**.
4. Select **Clock only** or **All info** and press **OK**.

Owner number

The phone numbers assigned to your SIM card are saved in Owner number if this is allowed by the card.

To view/edit or the numbers:

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Owner number** and press **OK**.

See [Phonebook, p.12](#) on how to add names/numbers.

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Language

The default language for the phone menus, messages etc. is determined by the SIM card. You can change this to any other language supported by the phone.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Language** and press **OK**.
4. Scroll / to select a language, then press **OK**.

LCD backlight

Select the delay time for the display backlight.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **LCD backlight** and press **OK**.
4. Select **15 sec.**, **30 sec.** or **1 min** and press **OK**.

Brightness

You can customize the phone's brightness settings.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Brightness** and press **OK**.
4. Select **Level 1 – Level 3** and press **OK**.

Text size

You can customize the text size for messages and the phonebook.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Text size** and press **OK**.
4. Select **Medium** or **Large** and press **OK**.

Audio setup

If you use hearing aid or have hearing difficulties when using the telephone in noisy environment, you can customize the phone's audio settings.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **User setup** and press **OK**.
3. Select **Audio setup** and press **OK**.
4. Select one of the following options and press **OK**:

| | |
|---------------|---|
| Medium | For normal hearing to mild hearing impairment or usage in noisy environment |
| High | For moderate hearing impairment or usage in very noisy environment |

Silent

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Silent** and press **OK**.
3. Select **On/Off** to enable/disable.
4. Press **OK** to save.

Tip:

Press and hold **#** to activate/deactivate **Silent**.

Block function

You can disable functions to simplify use of the phone.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Block function** and press **OK**.
3. Select each function you want to disable and press **On**.
4. Press **Done** to confirm.

Emergency

Settings for the Emergency key function.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Emergency** and press **OK** for the following settings:

Activation

Select one of the following options and press **OK**:

| | |
|------------------|---|
| Off | Emergency key disabled |
| On Normal | To activate, press and hold key for approximately 3 seconds, or press 2 times within 1 second |
| On (3) | To activate, press key 3 times within 1 second |

Numbers list

The list of numbers that will be called when the Emergency key is pressed.

1. Select **Empty** and press **Options**.
2. Select **Phonebook** to add a contact from the phonebook. Alternatively, press **Manual**. See [Phonebook, p.12](#) on how to add names/numbers.
3. Press **Save** to confirm.

Repeat until you have 5 contacts (maximum).

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

SMS

The message to be sent to the contacts in **Numbers list** when the Emergency key is pressed.

Activation

Select one of the following options and press **OK**:

| | |
|------------|---|
| On | The phone sends a text message before dialling |
| Off | The phone dials without sending a message first |

Message

Press **Edit** and enter the message and then press **OK** to confirm.

Note!

You **must** write a standardised message if you activate the SMS function. Otherwise the recipient sees only a blank SMS.

Confirm with "0"

Select one of the following options and press **OK**:

| | |
|------------|--|
| Off | The phone will dial the first number on the list. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until  is pressed. |
| On | The function will work as above AND: If the recipient doesn't press 0 within 60 seconds the call will be disconnected and the next number in sequence will be called. If the recipient presses 0 within 60 seconds, the call is confirmed and no further call attempts will be made (emergency sequence interrupted) |

Signal type

Adjustment of the signal type for notification of the emergency sequence.

Select one of the following options and press **OK**:

| | |
|---------------|---|
| High | Loud signals (default) |
| Low | One low signal |
| Silent | No sound indication, like a normal call |

Alarm info

Please read this important safety information before enabling the emergency function:

Be careful about including numbers with automatic answering in the call list, as the alarm sequence stops once the call is answered.

Voice mail

If your subscription includes an answering service, callers can leave a voice mail message when you cannot answer a call. Voice mail is a network service and you may need to subscribe to it first. For

more information and for the voice mail number, contact your service provider.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Voice mail** and press **OK**.
3. Select **Empty** and press **Options**.
4. Select **Phonebook** to add a contact from the Phonebook. Alternatively, press **Manual**. See [Phonebook, p.12](#) on how to add names/numbers.
5. Press **Save** to confirm.

To edit or delete an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Connect

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Voice mail** and press **OK**.
3. Select **Options** and press **OK**.
4. Select **Connect** and press **OK** to call the voice mailbox.

Tip:

Alternatively, press and hold **1** to call your voice mail.

Speed dial

The numerical keys **0** and **2** – **9** can be used for speed dialling.

Adding speed dial numbers

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Speed dial** and press **OK**.
3. Select **0** and press **Add**.
4. Select an entry from the phonebook and press **OK**.
5. Repeat to add speed dial entries for keys **2** – **9**.

To speed dial an entry, press and hold the corresponding number key. To edit an existing entry, select it and press **Options**, then select **Edit** or **Delete** and press **OK**.

Call setup

Depending on network support and subscription. Contact your service provider for more information.

Caller ID

Display or hide your phone number on the recipient's phone when you call. Select an option and press **OK**:

| | |
|-----------------------|------------------------------------|
| Set by network | Use default setting by the network |
| Hide ID | Never show your number |
| Send ID | Always show your number |

Call waiting

You can handle more than one call at a time. An alert tone will be heard if there is an incoming call while talking. Select an option and press **OK**:

| | |
|---------------------|--|
| Activate | Enables Call waiting |
| Deactivate | Disables Call waiting |
| Query status | Displays if Call waiting is active or not |

Call divert

You can divert calls to an answering service, or to another phone number. Set up which calls should be diverted. Select a condition and press **OK**, then select **Activate**, **Deactivate** or **Query status** (see [Call waiting, p.25](#)) for each.

| | |
|-----------------------|---|
| Voice calls | Diverts all voice calls |
| Unreachable | Diverts incoming calls if the phone is turned off or out of range |
| No reply | Diverts incoming calls if unanswered |
| If busy | Diverts incoming calls if the line is busy |
| Cancel diverts | Do not divert calls |

Call barring

Your phone can be restricted to disallow certain types of calls.

Note!

A password is needed to apply Call barring. Contact your service provider to get the password.

| | |
|-------------------------|--|
| Outgoing calls | Press OK then select: |
| All calls | User can answer incoming calls but not dial out |
| Internat.calls | User can not call international numbers |
| Int. except home | User can not call international numbers except to the country associated with the SIM card |
| Incoming calls | Press OK then select: |
| All calls | User can dial out but not receive incoming calls |
| When roaming | User can not receive incoming calls while roaming (operating in other networks) |
| Cancel all | Cancel all call barring (password needed) |

Answer mode

Select **Any key** and press **On** to be able to answer incoming calls by pressing any key (exemption .

SMS settings

1. Press **Menu**, scroll to  and press **OK**.
2. Select **SMS settings** and press **OK**.

Predictive text

Press **On** to enable Predictive text/eZiType™, see [Entering text](#) , p. 6.

Profile set

This number is needed to use the message function. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If the service centre number is saved on the SIM card it is shown. If not, you can enter the number yourself. Contact your service provider for more information.

1. Add/edit the service centre number. Use / to move the cursor. Press **Clear** to erase.
2. Press **Save** to save the new number.

Memory status

Displays the percentage of memory space used on the SIM card and in the phone memory.

Storage

1. Select **SIM** (default) to store messages on the SIM card, or **Phone** to store messages in the phone memory.
2. Press **OK** to confirm.

Cell information

You can receive messages on various topics from your service provider, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact your service provider. Cell broadcast messages cannot be received when the device is roaming.

Select **Cell information** and press **OK** for the following settings:

| | |
|------------------------|---|
| Function on/off | To turn information On or Off |
| Read | Select Read and press OK to read the message |
| Languages | Select language and press OK |
| Settings | Select from which channels you want to receive/subscribe messages. Use the options Select , Add , Edit and Delete to define your channels |

Network setup

If Automatic (default) is selected, your service provider is selected automatically, if this is within range/available in your area. If you select Manual, you can select a network that has a roaming agreement with your service provider. This is called roaming. Contact your service provider for more information.

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Network setup** and press **OK**.
3. Select one of the following options and press **OK** to confirm:

| | |
|------------------|---|
| Automatic | Network is selected automatically |
| Manual | A list of available network operators is displayed (after a short delay). Select desired operator and press OK |

Services

This menu may contain pre-programmed services from your network provider. Depending on network support and subscription.

Security

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Security** and press **OK**.

SIM lock

The SIM card is protected with a PIN code (Personal Identification Number). The phone can be set to ask for the PIN code on startup.

Select one of the following options and press **OK** to confirm:

| | |
|------------------|--|
| Off | PIN code deactivated. Warning, if SIM card is lost/stolen it is unprotected |
| On | PIN cod activated, you need to enter the PIN code every time the phone is started |
| Automatic | You do not need to enter the PIN code when the phone is started, the phone remembers it automatically. If SIM card is moved to another phone (lost/stolen), the PIN code needs to be entered to unlock |

Note!

You need to input the current PIN code to disable/enable SIM lock.

Phone lock

Select **On/Off** and press **OK** to enable/disable.

Note!

*You need to input the current Phone code to disable/enable Phone lock. The default Phone code is **1234**.*

Auto keylock

Select the time delay for automatic keypad lock.

1. Select **None**, **5 sec.**, **30 sec.**, **1 min** or **5 min.** and press **OK**.

Fixed dial (FDN)

You can restrict calls to certain numbers saved on the SIM card. The list of restricted numbers is protected by your PIN2-code.

| | |
|----------------------|--|
| Mode | Select On/Off and press OK . Enter PIN2: and press OK to confirm |
| Fixed numbers | Press Options for the following settings: Add , Edit or Delete and press OK . Enter PIN2: and press OK to confirm |

Note!

You can save parts of phone numbers. For example, if you save 01234, allows calls to all numbers starting with 01234. It is possible to place an SOS call by entering the main local emergency number followed by  even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card.

Remote config (remote configuration)

Allow persons that you trust, usually a family member or friend, to send information to your Doro PhoneEasy® 505. You can receive phonebook contacts and contacts for speed dial keys, calendar tasks and settings for the emergency key. When activated, you don't have to do anything, it's the other person that send information to you.

Select **Remote config** and press **OK** for the following settings:

Activation

Select **On** to activate remote configuration and press **OK**.

| | |
|------------|-------------------------------|
| On | Remote configuration enabled |
| Off | Remote configuration disabled |

Numbers list

You need to add the name and number of the person(s) that is allowed to send information from their phone to your Doro PhoneEasy® 505.

1. Select **Numbers list** and press **OK**.
2. Select **Empty** and press **Options**.

3. Select **Phonebook** if you want to add a contact from the Phonebook.
Alternatively, press **Manual**.
4. Press .
5. Enter the number and press **Save**.

Repeat until you have 5 contacts (maximum).

To edit or delete an existing entry, select it and press **Options**, then select **View**, **Edit** or **Delete** and press **OK**.

Change Passwords

To change the **PIN**, **PIN2** or the **Phone code** passwords:

1. Enter the current code and confirm with **OK**.
2. Enter a new code and confirm with **OK**.
3. Enter the new code again and confirm with **OK**.

Reset settings

If you select **Reset settings**, the changes that you have made to the phone settings will be reset to default settings. Input the phone password and press **OK** to reset.

Reset all

If you select **Reset all**, your phone settings and content, such as contacts, number lists and messages, will be deleted. Input the phone password and press **OK** to reset.

Note!

*The default Phone code is **1234**.*

Additional functions

Alarm

1. Press **Menu**, scroll to  and press **OK**.
2. Select **On** and press **OK**.
3. Enter the alarm time using the keypad, then press **OK**.
4. For a single occurrence, select **Single** and press **OK**.

5. For a repeated alarm, select **Repeated** and press **OK**. Scroll through the list of weekdays and press **On/Off** to enable/disable the alarm for each weekday, then press **Done**.
6. To edit an alarm, press **Edit**, then press **OK**.
7. To stop the alarm, press **Off**. The alarm is now deleted.

Note!

The alarm will work even when the phone is switched off. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

*When the alarm goes off a signal will sound. Press **Stop** to turn off the alarm or press **Snooze** to repeat the alarm after 9 minutes.*

Calendar

1. Press **Menu**, scroll to  and press **OK**.
2. Select **Options**.
3. Select one of the following options and press **OK**:

View tasks

Show tasks for the selected date.

Add task

1. Enter a date for the task, then press .
2. Enter a time for the task, then press .
3. Press **Edit**, enter a description for the task, see [Entering text](#) , [p. 6](#), then press **Done**.
4. Press **Save** to save the task.

At the set date/time, an alert tone will be played and the task description will be shown on the display.

Jump to date

Enter the date and press **OK**.

Note!

The calendar will work even when the phone is switched off. Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Calculator

The calculator can perform basic mathematical operations.

1. Press **Menu**, scroll to  and press **OK**.
2. Enter the first number. Use **#** to enter decimal points.
3. Use the arrow keys to select an operation (+, -, x, ÷) and press **OK**.
4. Enter the next number and press **OK**.
5. Repeat steps 2 – 4 as necessary.
Select **=** and press **OK** to calculate the result.

Instructions for the REMOTE USER

Sending remote control commands by text message.

Activation must be set to **On** and the remote user must be entered in **Numbers list** on the Doro PhoneEasy® 505.

Menu →  → **Security** → **Remote config.**

All contacts sent to Doro PhoneEasy® 505 by remote configuration are stored in the Phone (even if storage is set to SIM).

3 phone numbers for each contact  Mobile,  Home or  Office.

Note!

*SMS format must be ***#Command#**, otherwise the SMS cannot be identified as a remote control command.*

Parameters are the content you want to send and you must use # sign to separate two parameters. In tables P = Parameters.

Setting a contact in the phonebook

| Command | P 1 | P 2 | P 3 | P 4 |
|-----------|---------------------------|-----------------------------|------|--------|
| phonebook | name max. length=30 | mobile max. length=40 | home | office |

Example:

You want to send Jeff Jackson's mobile number, home number and his office number to Doro PhoneEasy® 505. The mobile number is: 0700-393939. Home number: 046-280 50 11. Office number: 046-280 50 83.

*#phonebook#Jeff Jackson#0700393939#0462805011#0462805083#

The number will be saved in the 505 Phonebook as:

| | |
|--|--------------|
|  | Jeff Jackson |
|  | 0700393939 |
|  | 0462805011 |
|  | 0462805083 |

Note!

Only use numerals for parameters 2, 3 and 4. If you use letters in these parameters it will be stored as empty/blank in the Phonebook.

Contacts already saved in the Phonebook, will not be replaced. They will be duplicated. This is to avoid unintentional removal of contacts from the Phonebook.

Tip:

When storing international numbers, always use + before the country code for best operation. Enter the phone number including the area code.

Setting the emergency function

| Command | P 1 | P 2 | P 3 | P 4 |
|---------|---------------------------------|---|----------------------------------|------------------------------------|
| alert | a activation | 0/1/2 0=Off 1=On Normal 2=On (3) | | |
| alert | n number | 1-5 location in Numbers list | Name max. length=30 | number max. length=40 |
| alert | m message | 0/1 0=Off 1=On | Text max. length=70 | |
| alert | c confirm with "0" | 0/1 0=Off 1=On | | |
| alert | s signal type | 0/1/2 0=High 1=Low 2=Silent | | |

Example:

You want to activate the emergency function.

*#alert#a#1#

You want Jeff Jackson to be stored in Numbers list in position one (1) with phone number: 0700-393939.

*#alert#n#1#Jeff Jackson#0700393939#

You want the SMS message to be sent out when the emergency button is pressed. Example of content in text message: This is an emergency message. Please take appropriate actions.

*#alert#m#1#This is an emergency message. Please take appropriate actions.#

You want to turn on the function Confirm with "0".

*#alert#c#1#

You want to set the Signal type to low.

*#alert#s#1#

Tip:

Remember to write down the positions you send. This way it is easier for you to later send changes.

Add task to calendar

| Command | P 1 | P 2 | P 3 |
|-------------|------------------------|---------------------|---|
| task | yyymmdd Date | hhmm Time | note description of task. max. length = 35 |

Example 1:

You want to send a new calendar task to Doro PhoneEasy® 505. It is for a dentist appointment in December 1, 2010 at 10:30.

*#task#20101201#1030#dentist appointment#

Troubleshooting

Phone cannot be switched on

| | |
|--------------------------------------|---|
| Battery charge low | Connect the power adapter and charge the battery for 3 hours. Full battery capacity are reached after the battery has been charged 3–4 times. |
| Battery incorrectly installed | Check the installation of the battery. |

Failure to charge the battery

| | |
|--|-----------------------------------|
| Battery or charger damaged | Check the battery and charger. |
| Battery should only be charged in temperatures between 0 °C and 40 °C | Improve the charging environment. |
| Charger incorrectly connected to phone or power socket | Check the charger connections. |

Standby time decreases

| | |
|--|---|
| Battery charge capacity too low | Install a new battery. |
| Too far from base station, phone is constantly searching for signal | Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone. |

Failure to place or receive calls

| | |
|-------------------------------|---|
| Call barring activated | Deactivate call barring. If this does not solve the problem, contact your service provider. |
|-------------------------------|---|

PIN code not accepted

| | |
|--|--|
| Wrong PIN code entered too many times | Enter the PUK code to change the PIN code, or contact your service provider. |
|--|--|

SIM card error

| | |
|---------------------------------------|---|
| SIM card damaged | Check the condition of the SIM card. If it is damaged, contact your service provider. |
| SIM card incorrectly installed | Check the installation of the SIM card. Remove the card and reinstall it. |
| SIM card dirty or damp | Wipe the contact surfaces of the SIM card with a clean cloth. |

Failure to connect to network

| | |
|-----------------------------------|--------------------------------|
| SIM card invalid | Contact your service provider. |
| No coverage of GSM service | Contact your service provider. |

Weak signal

| | |
|----------------------------------|----------------------------------|
| Too far from base station | Try again from another location. |
| Network congestion | Try calling at a later time. |

Echo or noise

| | |
|--|---|
| Regional problem from bad network relay | Hang up and redial. This may switch to another network relay. |
|--|---|

Failure to add a contact

| | |
|------------------------------|------------------------------------|
| Phonebook memory full | Delete contacts to free up memory. |
|------------------------------|------------------------------------|

Failure to set a function

| | |
|--|--------------------------------|
| Function not supported or subscribed from network | Contact your service provider. |
|--|--------------------------------|

Safety instructions** CAUTION**

The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children.
The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

Network services and costs

Your device is approved for use on the GSM 900/1800/1900 MHz networks. To use the device, you need a subscription with a service provider.

Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment

Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position.

This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 1.5 cm from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal, and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete.

Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased.

Medical units

The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 cm be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. Persons with pacemakers:

- Should always keep the phone more than 15 cm from their pacemaker when the phone is turned on.
- Should not carry the phone in a breast pocket.
- Should use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, turn the phone off immediately.

Areas with explosion risk

Always turn off the unit when you are in an area where there is a risk of explosion. Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine. In these areas, sparks can cause explosion or fire which can lead to personal injury or even death.

Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities.

Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress.

Areas with risk for explosion are often – but not always – clearly marked. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust or metal powder.

Li-ion battery

This product contains a Li-ion battery. There is a risk of fire and burns if the battery pack is handled improperly.



WARNING

Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, do not disassemble, crush, puncture, short external contacts, expose to temperature above 60° C (140° F), or dispose of in fire or water. Recycle or dispose of used batteries according to the local regulations or reference guide supplied with your product.

Protect your hearing

This device has been tested to comply with the Sound Pressure Level requirement laid down in the applicable EN 50332-1 and/or EN 50332-2 standards.

**WARNING**

Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Note!

For France, mobile headphones or earphones for this device have been tested to comply with the Sound Pressure requirement laid down in the applicable NF EN 50332-1:2000 and/or NF EN 50332-2:2003 standards as required by French Article L. 5232-1.

A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.

Emergency calls

IMPORTANT!

Mobile phones use radio signals, the mobile phone network, the terrestrial network and user-programmed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies.

Vehicles

Radio signals can affect electronic systems in motor vehicles (for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems) that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment.

Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags: Remember that air bags fill with air with considerable force.

Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand. Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air.

It is prohibited to use the unit in flight. Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.

The advice applies to the unit, battery, mains adapter and other accessories. If the phone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if batteries other than DORO original batteries are used.

Specifications

| | |
|--------------------|------------------------|
| Network: | GSM 900/1800/1900 MHz |
| Dimensions: | 125 mm x 52 mm x 16 mm |

| | |
|-----------------|--------------------------------|
| Weight: | 95 g (including battery) |
| Battery: | 3.7 V / 850 mAh Li-ion battery |

eZiType™ is a trademark of Zi Corporation.

vCard is a trademark of the Internet Mail Consortium.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. Doro PhoneEasy® 505 measures 0.578 W/kg measured over 10 g tissue.

The maximum limit according to WHO is 2.0 W/kg measured over 10 g tissue.

Declaration of Conformity

Doro hereby declares that Doro PhoneEasy® 505 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS). A copy of the Declaration of Conformity is available at www.doro.com/dofc

PhoneEasy 505 (2011)

English

Version 1.2

© 2012 Doro AB. All rights reserved.

www.doro.com

CE 0700

REV 5140 — STR 110817