

easiphone


stay connected, stay safe

EASYPHONE EASY 1

www.easiphones.co.uk


DIAGRAM OF EXTERNAL FEATURES

 - ① Lanyard hole
- ② Earpiece
- ③ Menu key
- ④ Dial key
- ⑤ Base connector
- ⑥ Micro USB
- ⑦ Audio jack
- ⑧ Microphone
- ⑨ Confirmation key
- ⑩ Hang up key
- ⑪ Return key
- ⑫ Navigation key
- ⑬ Flashlight
- ⑭ Unlock key
- ⑮ Speaker
- ⑯ Camera
- ⑰ SOS Button

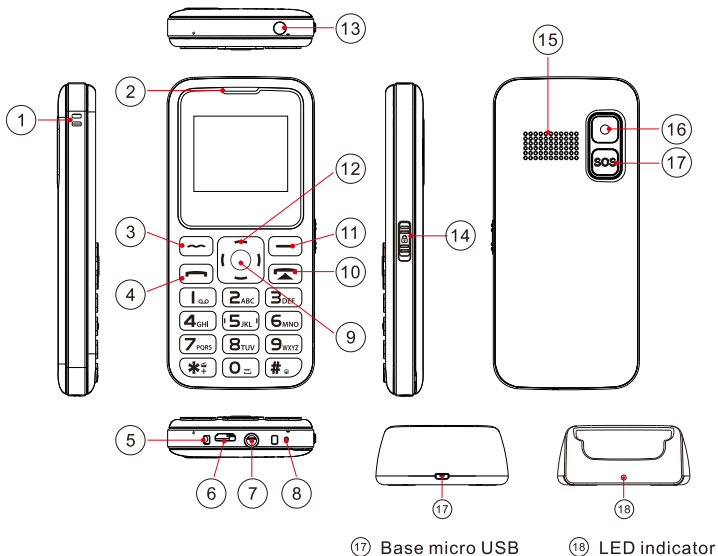


INSTALL SIM CARD

 You can remove the back cover through the gap in the lower right corner, then you will see 2 SIM card slots and 1 micro SD slot. see figures below:

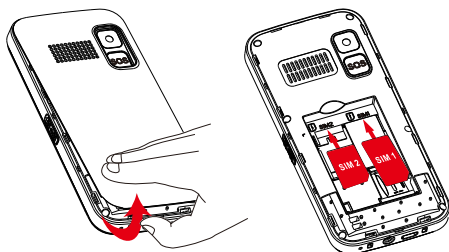


PLACE BATTERY

 
After SIM card is installed, please tear off the insulation label on battery connector and put the battery into the phone properly, then put on the back cover.

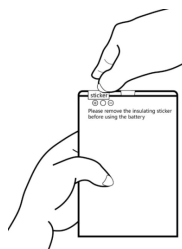


TURN ON/OFF THE PHONE

 
Long press  for 3 seconds on the keypad, the phone will be turned on/off.

SHORTCUT KEYS

This key  is navigation key, you can press the top of it for FM radio, down for alarm, left to write message, right for profiles.


SAVE CONTACT

Input telephone number on keypad and then press  to save, see figures below:

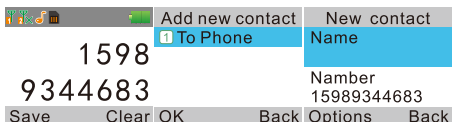

UNLOCK KEYPAD

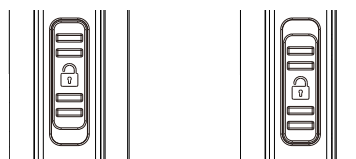 


There is "slide to unlock" key on the right side of Easiphone Simple 1. You can slide down to lock, slide up to unlock.



Keypad Unlock

Keypad Locked

MAKE A CALL/ANSWER A CALL

 
You can input telephone numbers by pressing number buttons on keypad, then press  key to make a call. And you can press  to call contact from phonebook. When someone calls you, just press  to answer the call.

READ SMS

When you receive new SMS (short message), there is an envelope icon in the upper left corner of the main interface, you can press Menu > Messaging > Ok > Inbox > OK to read SMS.



INSTALL MEMORY CARD

The built-in memory of GSM mobile phone is very small, in order to use camera and multimedia function of Easiphone Simple 1, a micro SD card is required (which is not included in standard package). The micro SD card must be placed into micro SD card slot as shown below:

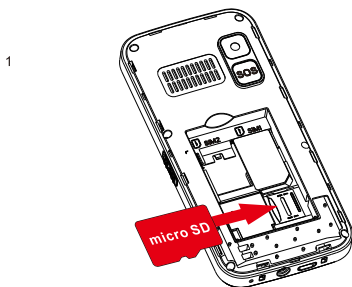

CHARGE BATTERY

  If the Easiphone shows low power or can't be turned on, please charge it first. There are 2 ways for charging, see figures:

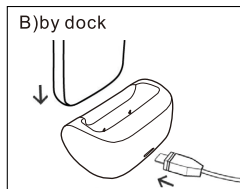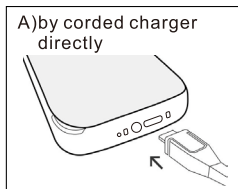

When you are using dock for charging, the indicator light on dock will turn red. If the phone is fully charge, the indicator will show green.

QUICKLY SWITCH PROFILES

Long press **#** 5 seconds to switch between three profiles: silent mode, Loud mode, and general mode (default mode).

CAMERA

You can open camera from Menu > Multimedia > Ok > Camera > Ok, then press **📷** to take photo.

FM RADIO

Select Menu > Multimedia > OK > FM Radio > Ok > Auto search > Yes to search channels and save them. After searching finished, you will see channels in channel list. And you can select the channel and press **🔊** key to play. If you want to stop FM radio, just press **🔊** key to stop it in FM radio interface.

SET RINGTONE AND RINGTONE VOLUME

Select Menu > Settings > OK > Profiles > General > Options > Customize > Select > Ringtone > Change > Choose Ringtones from the list > OK. And you can adjust ringtone volume at the same menu by pressing **🔊** key.


ALARM AND BLUETOOTH

You can get to the alarm setting menu by step Menu > Organizer > Ok > Alarm > OK > edit to set alarm. In the same "Organizer" menu, you can find "Bluetooth" setting too.

TURN ON/OFF FLASHLIGHT

Long press **📷** key for 3 seconds, the flashlight will be turned on/off.

MENU

To access main menu, press  on keypad. The menu tree is as follows:

Messaging - Write message, Inbox, Outbox, Drafts, Sent message, SMS settings.

Call center - Call history, Call settings, Magic voice.

Phonebook - Add new contact.

Multimedia - Camera, Image viewer, Video recorder, Video player, Audio player, Sound recorder, FM radio, File manager.

SOS setting - Status, SOS number, SOS SMS on/off, SOS SMS, Warning tone status.

Organizer - Services, Bluetooth, Calculator, Calendar, Alarm, Torch, Family numbers.

Settings - Profiles, Phone settings, Security settings, Dual SIM settings, Connectivity, Restore settings.



SPEED DIAL/FAMILY NUMBERS

When some contact is set as family number, you can speed dial him/her. The steps of setting family number is:
Menu > Organizer > OK > Family numbers > OK > Status > OK > ON > OK > Done, and then you can set key 2~9 as family numbers by choosing contacts from phonebook (Save contacts in phonebook at first). See figures:

Organizer	Family number	Set number
4 Calendar	1 Status	2 AARON
5 Alarm	2 Set number On	3 <15989344683>
6 Torch		4 <Empty>
7 Family number		5 <Empty>
OK Back	OK Back	Options Back

After some contact is set as family number, you don't need to dial his/her full telephone numbers every time, just long press the corresponding key for 3 seconds in main menu state, then his/her phone number is dialed out.

SOS EMERGENCY CALL

Long press  button on the back of the phone for 5 seconds, The phone will automatically dial the preset SOS contact and send SOS SMS to him/her. You can set up to 5 contacts as SOS numbers and set 1 SOS SMS. At the same time, the phone will sound "wawuwawu" alarm tone (the alarm tone can be turned off in SOS setting menu). If you make SOS call accidentally, just press  to stop it.

TURN ON/OFF SOS FUNCTION

The steps of turning on SOS status are:
Menu > SOS setting > OK > Status > On > Ok > Done, then you will see figure as follow:

SOS setting
1 Status On
2 SOS number
3 SOS SMS on...
4 SOS SMS
OK Back

After SOS status is turned on, then set SOS number/SOS SMS/Warning tone status in this menu.

SOS setting
1 Status
2 SOS number
3 SOS SMS on...
4 SOS SMS
OK Back

RESET THE PHONE

Please backup your personal data and contacts before resetting the phone. The steps of resetting the phone is:
Menu > Setting > OK > Restore settings > Ok > Input phone password "1122" > Ok. Then the phone will restart automatically and it is reset.