

Dear Customer!

Congratulations on your purchase of this MaxCom mobile telephone! You have made the right decision.

Included in-box: Mobile telephone, Traveler charger, battery, instructions

1 CONTROLS



Terminate/Back/Delete/On/Off-Key

- Terminate a call
- In menu: one step back
- Delete entry
- On/Off: press for 2 seconds

Receiver

Display (Screen)

Arrow Keys

- On standby:  Enter the menu
- On standby:  Enter the phone book
- Scroll in menu and phone book

Pick-up/OK-Key

- Make call or take call
- In menu: Confirm selection
- On standby: Enter dialed numbers

- Key

Press and hold to connect with voice mail

- Key

- On standby:
 - Press and hold for quick dial key M1 (see Chapter 7)
 - For SMS: Special characters
(, . ? ; : ! " ' ~ & + - () < > { } [] % = / \ # * \$ % ...)
- Radio: Scan (filter) sender

- Key

 
- On standby:
 - Press and hold for quick dial key M2
 - For SMS: Switch between capital, small letters & numerals

0 - Key

- For SMS: Space
- Press and hold for inserting: +
(country prefix, e.g. "+39" for ITALY)

Volume Control + & -

Change the handset volume or the radio volume

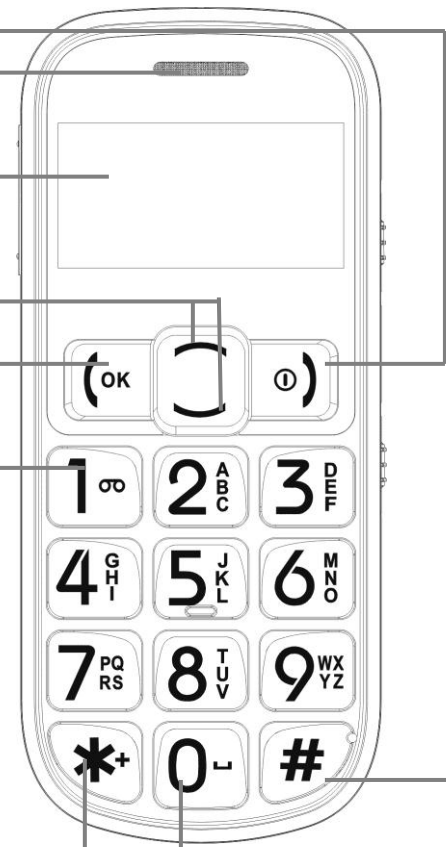

16 SAFETY INSTRUCTIONS



Switch off mobile telephone in hospitals or near medical devices. There should be a minimal distance between pacemakers and switched-on telephones.



Do not operate a vehicle while holding a mobile phone in your hand. Follow the laws and traffic rules of the country you are in.



The mobile phone is to be switched off while you are in an airplane.



The telephone is to be switched off near petrol stations or other areas with explosive materials.

Never shine **LED- flashlight** into the eyes of humans or animals!

(Protection class 3)

SAR-value: The maximum weight determined by the EU is 2.0 W/kg.

This model has a maximum 0,112 W/kg.

17 INTENDED USE

This mobile telephone is robust and intended for mobile use. It is to be protected from moisture (rain, bathroom...) and impacts. Do not expose to prolonged direct sunlight.

Other use as described above leads to damage of product and furthermore is associated with hazards such as electrical shock, fire and so on. The entire product may not be altered nor rebuilt nor can the housing be opened.

 
The power adapter is designed for use in household wall outlets to public electricity grids with 230 volts / 50 Hz (10/16A) voltage.

18 TECHNICAL DATA

Dual band GSM 900/1800MHz Battery: Li-Ion 3.7V / 800mAh

Dimensions: 103x49x15mm Standby-Time: 170h

Weight: 80 (With Battery) Talk time: 120min

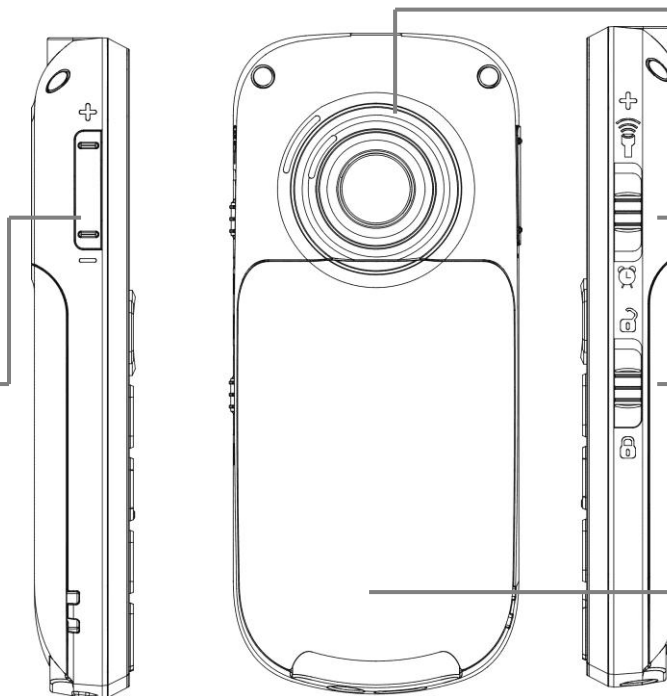

Emergency call button



Flashlight

- Switch up: Flashlight on

Keylock

- Switch up: Keylock off
- Switch down: Keylock on

Battery door

15 DECLARATION OF CONFORMITY

Declaration of Conformity

We the manufacturer / Importer: Maxcom Sp. z o.o., ul. Towarowa23a, 43-100 Tychy POLAND

Declare under our sole responsibility that the following product:

Type of equipment: Dual Band Mobile Phone
Model Name: MM431
Brand: MAXCOM

 

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Member States relating to **Radio Spectrum Matters**, the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**.

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on the Directive 1999/5/EC and the following standards:

Radio Spectrum: EN 301511
Health: EN50360:2001 EN62209-1 :2006
EN62311:2008/IEC62209:201

EMC: EN 301489-1:V1.5.1:2005;
EN 301489-7:V1.2.1:2002;
Electrical Safety: EN 60950-1:2001+A11:2004.

Manufacturer / Importer
(signature of authorized person)

Signature:  
"MAXCOM" Sp. z o.o.
PREZES ZARZADU
max.com Sp. z o.o.
43-100 TYCHY, ul. Towarowa 23a
tel. 032/3277089, fax 032/3277860

Date: 29,10,210

2 INSERTING SIM CARD

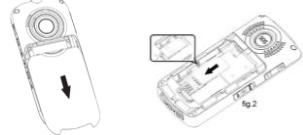 


Fig. 1: Remove battery cover (as shown).

Fig. 2: Slide SIM card in with the gold contact facing down.

3 INSERTING AND LOADING BATTERY

 


Fig. 3: Insert battery

Slide cover to closed position with a 'click'.

Fig. 4: Insert the charger cable in the socket on the underside of the handset.

 
During charging: Bars moving on display.

Full battery: Bars are solid.

Charge battery for at least 4 hours before making/receiving first call!

4 DISPLAY SYMBOLS (SCREEN)

Standby:

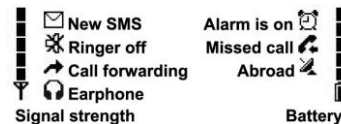

Emergency numbers → Add contact

b. When you first use your SIM card, you are asked to input the Local SOS number Owner info Emergency Number (you can input the number or choose from your prestored phonebook)

● Switch emergency function On / Off: In menu **Phone book** → **Emergency numbers** → **Status** → **On / Off**
Note: If you want to save emergency numbers like emergency services, police, fire department, etc., you must clarify this with each institution. No liability will be assumed for possible costs incurred if you dial accidentally.

9 SMS MESSAGES

SMS (Short Message Service) are written messages with a maximum of 160 characters.

● **Write SMS:** Enter menu with → **Messages:** (→ **Write new SMS** (. The text entry takes place over the keypad each key is supplied with several characters which appear with multiple presses.

(e.g. 2x [4], 2x [3], 3x [5], 3x [5], 3x [6] for Hello).

1	, . ? ! 1	5	j k l 5 £	9	w x y z 9 ý þ
2	a b c 2 ä æ å à	6	m n o 6 ö ø ó	0	Space; 0
3	d e f 3 è ê ë	7	p q r s 7 ß \$	*	Special characters: . , ? ; :
4	g h i 4 i i î	8	t u v 8 ü ú	!"'	@ _ ~ & + - () < > { } [] ...

By pressing # you switch between entry methods:

By pressing KEY # you switch between entry methods:

● **Send SMS:** Select Send with 2x (and enter number or dial from phone book ((, scroll to names and select with (. Then press (to send

5 THE FIRST STEPS

When you first use your Sim card, the phone will ask you to fulfill the Emergency info as indications (See chapter 8.)

Pressing the () - key for at least 2 seconds switches the telephone on.

To **switch off**, also press for 2 seconds.

When using a new SMS card, the 4 digit PIN Code (Personal Identification Number) must be entered and confirmed with.

PIN-Code: The PIN-Code is a 4-digit number combination which should prevent others from switching on your mobile phone.

● Switch off PIN-Code: In menu: **Settings** → **PIN request** → **Off**

Entering Menu: Press (- key

● Scroll through menu points: (with and (

● Confirm: with (

Incoming Call:

● Pick up: Press (- key - Reject: Press () - key

To end call: Press () - key

To Dial: Enter the telephone number over the keypad (including area code with 0) - begin call with (.

Repeat Dial: By pressing the (key, you reach the dialed numbers. Select a number with (and (and begin the call with (.

Storing phone book entries (Name & Number):

Enter menu with (→ continue to Phone book: (, (continue to Add contact: (, → choose the memory on SIM card or on phone: (.

● Receive SMS: A short signal and a registration on the display inform you about a new, incoming SMS message. With (you can read the message immediately or see a list of messages which have already been received in the menu **Messages** → **Received SMS**.

11 TOOLS & CALCULATOR

● **Alarm clock:** Choose an alarm from the list in **Settings** → **Alarm clock** → **Set Alarm:** 2 x (, select **Once** or **Every day:** (, enter hours and minutes as two digits. Select the alarm melody and after pressing (again the alarm clock is set.

If the alarm clock goes off, end with () . (Note: If the alarm clock is switched on in the menu, it will ring the next day again!!) or activate mute function with (and (ie clock will ring again after 5 minutes.

To change alarm clock melody in **Setting** → **Settings** → **Ring tone** → **Alarm melody**.

● **Memo:** Save memos with reminder functionality.

● **Calculator:** Execute basic arithmetical operations.

Enter name over keypad (See chapter 9, Write SMS for text entry), (, enter number, (.

Searching phone book entries:

Open the phone book with : (

● Scroll through the entries with (and (. Or:

● Use the Name Search: Enter the initial letter of the searched entry on the keypad (if necessary scroll through with () .

When it is displayed, press (to make a call.

Dialing with Quick Dial Keys:

Using *, # and keys 2 to 9 you can call a predefined and often called contact by the press of one button (press and hold for 2 seconds). See Chapter 7.

Hands free Speaking:

The Hands free option can be switch on or off by pressing KEY 0 during an active call.

6 PHONE BOOK

Saving names and numbers (start with international prefix, e.g. +39 for Italy).

Go into menu with (→ continue to **Phone book:** (→ (, Menu-Points: Search name, Add contact, Delete,

Copy all Emergency numbers (save, edit, delete, status on/off), Quick dial keys, Phone book Settings (Save entry on SIM Card/Phone, Memory status).

7 QUICK DIAL KEYS

Dial a saved number with 'one press' of a key. Press and hold the * or # key or any key 2 to 9 .

To set, enter the menu, **Phone book** → **Quick dial keys**,

12 OTHER FUNCTIONS IN SETTINGS

Into menu with (→ continue to **Settings:** (,

● **Silent mode:** The mobile telephone does not make any sound for incoming calls and does not sound for incoming.

● **Vibrating alert:** Enable or disable the vibration for incoming calls.

● **Settings:** You can change the Ring tones here (for (incoming calls, SMS, birthday reminder), the Volume (call, ringing, key tones), language, Time and Date.

● **Network selection:** **Settings** → **Network settings** → **Network selection:** Automatic or manual.

● **PIN request:** On/Off or Change.

● **Master reset:** Reset the mobile phone to factory settings.

13 DISPOSAL

Disposal of packaging: Packaging and packaging aids are recyclable and should be entered into the recycling process.

Battery disposal: Batteries do not belong in the household trash! As a consumer, you are obligated to return used batteries. These can be handed into local collection areas or to specialty shops.



select the quick key to allocate. In the point **Edit**, select the contact and save with (.

Note: The name must already be saved in the phone book.

Saving a new entry directly to quick dial keys is not possible.

Key 1 is reserved for the voicemail number. You can change this in the menu **Messages** → **Mailbox** → **Mailbox number**.

8 EMERGENCY FUNCTION

You can save a total of 5 emergency numbers (family, neighbours, friends, emergency services). These preselected numbers will be dialed automatically in a stored sequence in an emergency, if the emergency button on the back of the phone is pressed and held.

A continual warning signal sounds during the emergency so that you and the person called will know that this is an emergency! If the number is not reached, the second number will be called automatically. If the second number is not reached, the first will be called again and so on (max. 3 rotations of the two numbers).

Note: This telephone does not recognize whether a person or machine has picked up the call and assumes that the call has been successfully!

If no emergency number is saved or if your calling card has expired or you have no access to a foreign network (e.g. roaming not permitted), 112 can be dialed.

● Saving emergency numbers:

a. In menu Phone book → Emergency numbers →

Device Disposal: When this product is eventually taken out of service, please do not throw it into the household trash. Take care of the environment by bringing it to a collection area where old devices are accepted and brought into an environmentally friendly disposal/recycling procedure.

14 FREQUENTLY ASKED QUESTIONS

● **Screen shows "No SIM card!":** Check the direction of the SIM card (Gold contact facing downwards)

● **A call failed:** Check the selected telephone number and area code again for accuracy (area code entered?)

● **The mobile telephone display is blank/black:**

Telephone is in energy saving mode: press any key. Or it is switched off (Hold () key for 2 seconds long to switch on)

● **The mobile phone does not react:** Remove battery, Re-insert and switch device on. If there is still no reaction, refer to the service centre.

● **The charging procedure does not begin:** This can take several minutes. If there is no reaction after 10 minutes, refer to service centre.

C € 0678