


User Guide

2.2" bar senior phone C03

Safety Precautions

- When you are driving, please do not make /answer a phone,if it can not avoid,please use freehand function and put your phone in a mobile phone holder.
- Interference caused by mobile phones can affect flight safety,so please turn off your mobile phone when you are on flight.
- When you are in blasting area,please turn off your mobile phone.
- When you are in gas station or close to dangerous places with fuel or chemical reagents,please turn off your phone.
- Please do not disassemble privately and use accessories approved by the manufacturer.
- Please do not put your phone in extreme environment, like strong sunshine and wet .

Operating elements

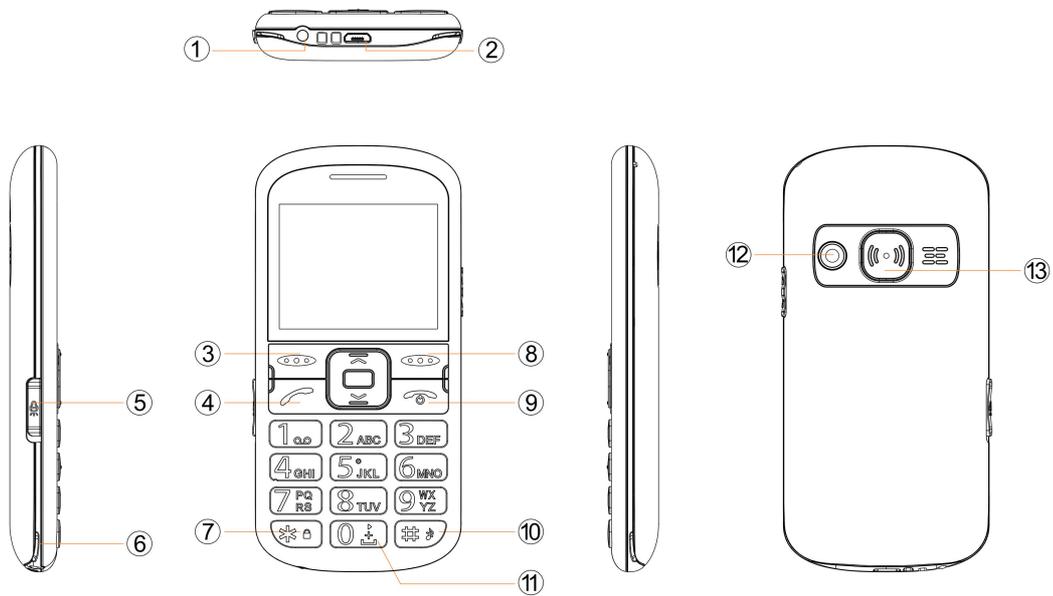

① MIC

② USB connector

③ Left soft key

④ Call key

⑤ Torch key

⑥ Cover lock

⑦ Keypad lock

⑧ Right soft key

⑨ Hook key

⑩ # key

⑪ 0 key

⑫ Camera


⑬ SOS key

Keys



Key	Name	Function
	CALL	--Make a new call --Answer an incoming call --Go into call history quickly when phone standby
	HOOK	--End/Reject calls --Long press to power on/off under standby mode --Make phone back to standby
	LEFT SOFT KEY	--Enter the main menu under standby mode --Confirm the function you choose --Guide to options
	RIGHT SOFT KEY	--Enter phonebook list under standby mode --Back to last menu --Delete/Cancel options
	UP	--Choose menu upward --Increase the volume when calling --Customized menu shortcuts
	DOWN	--Choose menu downward --Lower the volume when calling --Customized menu shortcuts
	*	--Lock/Unlock keypad when standby by long press --Lower the volume in FM radio & Audio player
	0	-- Key 0 --Start/Stop FM & Audio Player
	#	--Key # --Change profiles (by long press) --Change input method when writing
	SOS	--Start/Stop SOS warning tone by long press (When SOS status is ON)
	TORCH	--Push downward to open torch --Push upward to close torch (when torch is on)
	1	--Key 1 --Select number secretarial(by long press)
	2-8	--Key 2-8 --Customized dial shortcuts(by long press)

Installation


1. Open battery cover

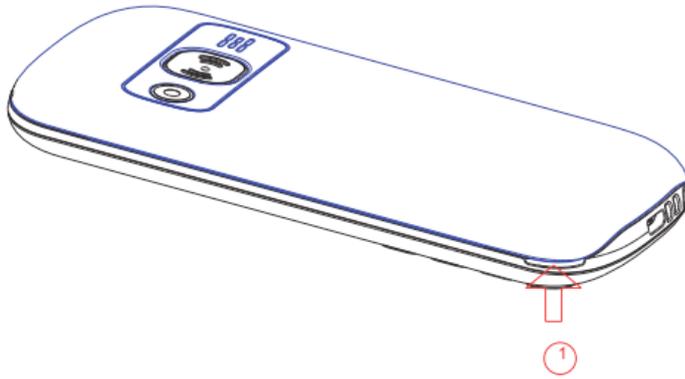





2. Install battery

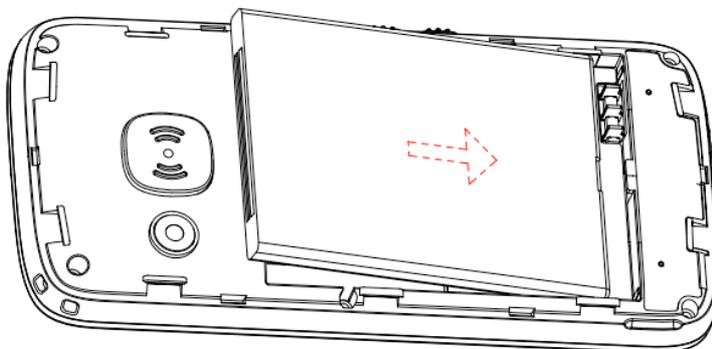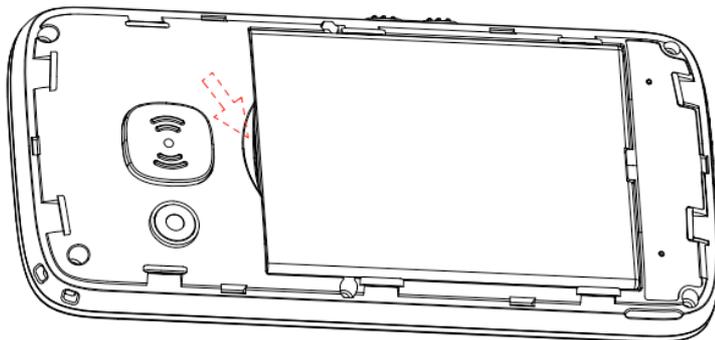

3. Insert SIM card

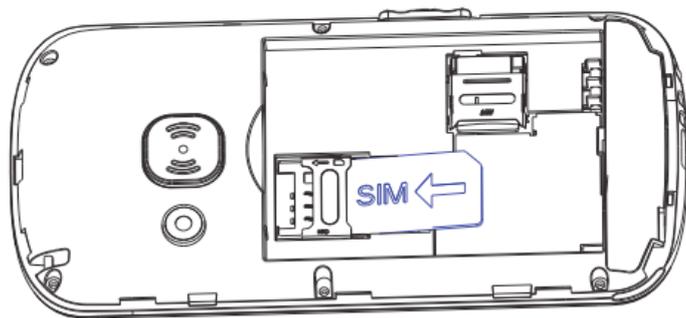

4. Insert TF card

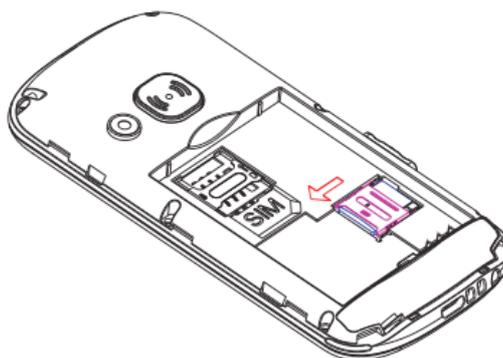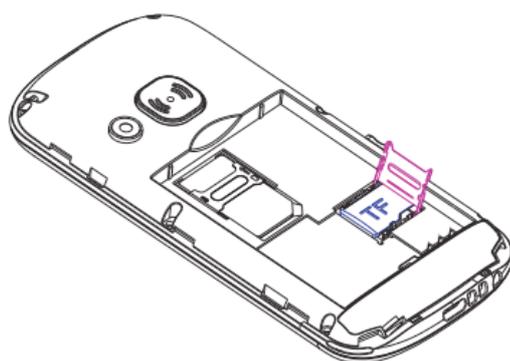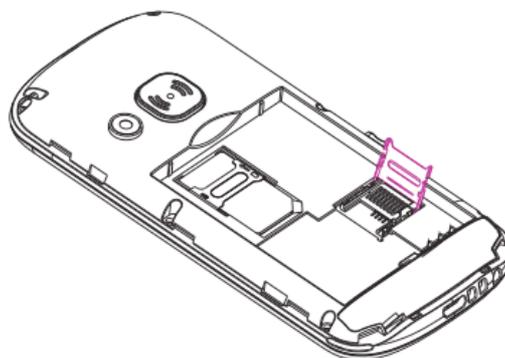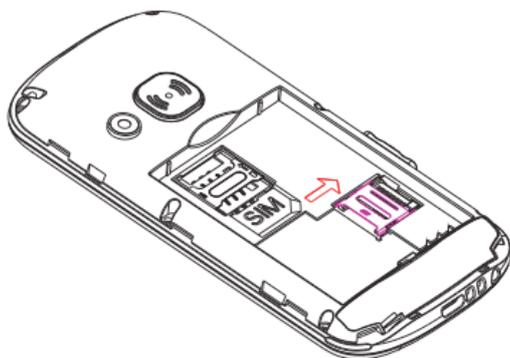

Menu Guide

1.Phone-book

1.1. Search

Search saved contacts by names,press  to change input method.

1.2. Add new contact

Add new contacts in phonebook, before Input contacts ,please select the storage position (can be SIM 1, SIM 2 or phone). Press  to change input method,after inputting name & phone number please remember to save the information.

1.3.Photo contact

Can save 8 photo contacts at most here,information include Name, Number, Picture, Ringtone.

- Name: Input name by press  to change input method
- Number: Input with number keys (0-9) ,+ may need.
- Picture: It can be default or choose from camera or files.f choose from camera then will go into camera function directly then users can take photos;if choose from file then will go into files saves in the phone or memory card.

Ringtone: It can be default or choose from system or files. There are some system ring-tones for choose and if choose from files then go into files saved in the phone or memory card.

Notice: When you finish any input or selection please remember to save the information.

1.4. Phonebook settings

1.4.1. Preferred Storage

- Phone
- SIM
- Both

1.4.2 Memory Status

Show the total numbers saved in phone and SIM card.

1.4.3 Copy contacts

1.4.4 Move contacts

1.4.5 Delete all contacts

When you select a save number from phonebook,you can make the following operations:

- View : See the details about the contact
- Send message
- Call,Edit or delete the contact
- Delete same number
- Copy or move the contact between phone and SIM card.

2.Message

2.1 Write message

2.1.1 Text message

Users can write text message here by pressing  to change input method (also can press  for more options), here can insert name and number directly from phonebook.

2.1.2 Multimedia message

Users can write multimedia message(includes text and images or video) here by pressing  to change input method when writing text(also can press  for more options), here can insert name & number directly from phonebook and insert images & videos from phone or memory card directly.

2.2 Inbox

Users can check reply all incoming message here,also can do following operations:

- ① View ②Reply ③ Call sender ④ Forward ⑤Delete
- ⑥Delete same number ⑦Delete all ⑧Save to phonebook

2.3 Drafts

If you do not wanna send this message at the moment ,users can put the message in drafts and send at another time. Also,if your message sent failed,it will be here too.When select one message in drafts users can:

View and edit the content

Delete the message

Delete all message in drafts

2.4 Outbox

See all message sent out, when select one ,users can do the following operations:

①View ②Resend ③Edit ④Delete ⑤Delete same number ⑥Delete all

2.5 Sent message

See all message sent successfully, when select one ,users can do the following operations:

①View ②Resend ③Edit ④Delete ⑤Delete same number ⑥Delete all

2.6 SMS Templates

2.7 SMS settings

2.7.1 Memory status

See message storage status of SIM and phone.

27.2 Save sent message

Here  and  for last and next choice.

3.Call center

3.1 Missed calls : Check the list of your missed calls.

3.2 Dialed calls:Check the number that you dialed.

3.3 Received calls:Check the list of calls you received .

3.4 All calls:Check list of all numbers that you dialed and received.

3.5 Delete call records:Users can delete the call history here.

When select a number from call history,users can :

- Call
- Send text message
- Send MMS
- Save to phonebook

- Add to blacklist
- Edit before call
- Delete

4.Magnifier

Press to make objects closer (see as bigger)  and  to make objects far (see as smaller)

5.Organizer

5.1 Alarm

Can set 5 alarms at most.Also can set Status, Time, Snooze, Repeat mode, Alarm tone and Alert type.

Alert type includes: [here  and  for last and next choice]

--Ring only

--Vib. Only

--Vib. And ring

5.2 Calculator

5.3 Bluetooth

5.3.1 Power

5.3.2 Visibility

5.3.3 My device

Show Bluetooth devices searched by “My phone” and can search new devices here too.

5.3.4 Search audio devices

5.3.5 My name

Show the Buletooth name of this phone,users can edit the name here ,changing input method by pressing 

5.3.6 Advanced

--Audio path: Leave in phone and Forward to Bluetooth headset optional.

--Storage: Phone,Memory card or Always ask optional.

--My address

5.4 Calendar

5.5 File Manager

File details in phone and memory card,users can open files and format storage too.

6. Multimedia

6.1 FM radio

Press  to start / stop FM,  to lower volume and  to increase volume,  to reach last channel and  to next channel.

6.1.1 Channel list

6.1.2 Manual input

6.1.3 Auto search

6.1.4 Settings

6.2 Audio player

Play audio files from phone or memory card,  to start/stop playing ,  to reach last audio file and  to next .

When select a audio file in list :

- Play
- Details
- Refresh list
- Settings

Include Pre. Playlist, List auto gen., Repeat, Shuffle, Background ply, Lyrics display,

etc.,here  and  for last and next choice.

6.3 Camera

Press  to take a photo.

6.3.1 Photos : to see all photos from camera

6.3.2 Camera settings

Set camera details include shutter sound, Anti-flicker, scene mode white

balance, delay timer etc. Here  and  for last and next choice.

6.3.3 Image settings

Set image size and quality, here  and  for last and next choice.

6.3.4 Storage (Phone or memory card)

6.3.5 Restore default

6.4 Image viewer

See all image save in phone and memory card. When select a picture, more operations as below:

- View
- Browse style
- Send (Via Bluetooth)
- Use as (Wallpaper, Power on display and Power off display optional)
- Rename
- Delete
- Delete all files
- Storage
- Image information

7. Settings

7.1 SOS settings

7.1.1 Status

7.1.2 SOS numbers (5 numbers at most)

7.1.3 SOS SMS Status

7.1.4 SOS SMS

7.1.5 Warning tone

7.2 Phone settings

7.5.1 Time and date

- Set home city
- Set time and date
- Set format
- Update with timezone

7.5.2 Language

7.5.3 Pref. Input method

7.5.4 Display

7.5.5 Shortcuts

7.5.6 Dedicated keys (Set quick menu for  and .

7.5.7 Misc. Settings

7.5.8 Press vib. settings

7.3 Profiles

--General

--Silent

--Meeting

--Outdoor

--Headset

Customize settings includes:

- Alert type: ①Ring only ②Vib. Only ③ Vib. And ring ④Vib.then ring
- Ring type
- Ringtone
- Message /keypad tone
- Ringtone volume
- Message /keypad volume

- Cover open/close tone

- System alert

7.4 Call settings

7.4.1 Blacklist

7.4.2 Whitelist

7.4.3 Auto redial

7.4.4 Call time reminder

7.4.5 Answer mode

7.5 Speed dial

--Set quick dial number for key 2-9

7.6 Block function

7.7 Up/Down key shortcuts

7.8 Security settings

7.8.1 Phone security

--Phone lock

--Change password

7.8.2 Screen auto lock

7.9 Restore settings

With default password "1234",users can make the phone back to factory status.