
Easiphones - EPP
Easy Picture Phone



User Guide

1	Features	33
2	In the box	3
3	Location description	4
4	Installation	5
4.1	Installing (or Replacing) the Battery	5
5	Setting up your phone	5
5.1	Set Time/Date	5
5.2	Set LCD Contrast	6
5.3	Set Flash Time	6
6	Telephone Operations	7
6.1	To answer a call	7
6.2	Making a call	7
6.3	To end a cal	7
6.4	During a call	8
	<i>To adjust the handset volume</i>	8
	<i>MUTE Function</i>	8
	<i>To switch between theHandset and theSpeakerphone</i>	8
	<i>To adjust the speakerphone volume</i>	8
7	Caller Display Operation	8
7.1	Caller Display list	8
	<i>To delete Caller Display record</i>	8
8	Outgoing Call List	9
	<i>To redial a call</i>	9
	<i>To delete an outgoing call record</i>	9
9	Memory	9
9.1	Direct memory M1, M2,M3	9
	<i>Storing a Number in M1,M2,M3</i>	9
	<i>To delete direct memory records</i>	10
9.2	Two-touch memory 0-9	10
	<i>Storing a Number in (0-9) two-touchmemories</i>	10
	<i>To delete two-touch memory records</i>	10
	<i>Dial out Stored number (0-9) two-touch memories</i>	10
9.3	Inserting a Pause in the dialing sequence	11
9.4	Use on PBX	11
10	Last Number Redial	11
11	Ringer volume	11

1 FEATURES

Dual Mode Caller ID (DTMF/FSK)
Handsfree speakerphone
Extra Large LCD Display
3 direct memory numbers (one touch)
10 indirect memory numbers (two touch)
Call register with up to 20 memories
Redial last 20 numbers
Switchable Flash Time (100/300/600/1000 ms)
Pause
Tone dialing
Mute
Ringer Hi/LO
Receiver Hi/Lo.
Speaker Volume control.
Incoming ringing LED indicator
Hearing aid compatible

2 IN THE BOX YOU WILL FIND:

- Base Unit
- Handset
- Coiled Handset cord
- Telephone line cord for Base unit
- User manual

Keep the packing materials in a safe place in case you later need to transport


Keep your sales (till) receipt, which is your guarantee.

Important note---back up batteries

The requires 2 x 1.5V AAA size Alkaline batteries installed into the battery compartment before use.

Warning: The caller display will not work and you will only be able to make and receive basic handset calls without batteries installed.

LOCATION DESCRIPTION

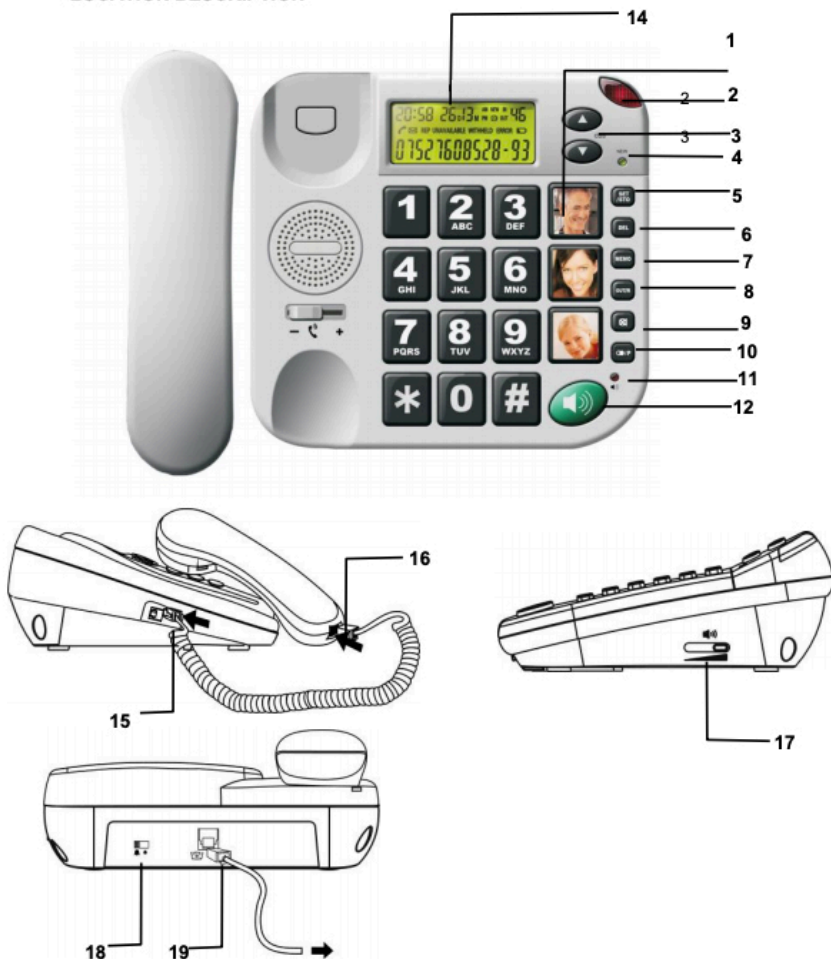

to Modular Wall jack

- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Direct dial memory buttons (M1,M2,M3) 2. Ringer light indication 3. Caller Display List&Scroll Up/Down buttons 4. New Calls LED 5. SET/STO(Store) button 6. Delete button 7. Memory button 8. OUT/R(Recall) button 9. Mute button 10. (Redial)/P(Pause) button | <ul style="list-style-type: none"> 11. Speakerphone LED 12. Speakerphone button 13. Handset volume adjust switch 14. LCD Screen 15. Coiled cord jack in base 16. Coiled cord jack in handset 17. SPEAKERPHONE volume switch 18. Ringer HI/LOW switch 19. Line jack |
|--|---|

4 INSTALLATION

1. Locating the Base unit

The Base unit should be placed on a level surface, in a position where:

- the telephone line cable will reach your telephone line socket or extension socket.
 - it is not close to a sink, bath or shower, or anywhere else where it might get wet.
 - it is not close to other electrical equipment - fridges, washing machines, microwave ovens, TVs, fluorescent lights, etc.
2. Plug the coiled handset cord into the Handset.
 3. Plug the other end into the jack on the left side of the Base unit.
 4. Place the Handset in the Base unit.
 5. Plug the telephone line cord into the socket at the back of the base and the other end into your telephone line socket.
 6. Lift the Handset and check for Dial tone in the earpiece.

4.1 *Installing (or Replacing) the Battery*


IMPORTANT


Before removing the battery compartment cover, always make sure the base unit is disconnected from the telephone line.

Install 2 pcs of Alkaline AAA batteries into the battery compartment and re-fit the cover before use

Note:

- Please do NOT use Rechargeable batteries in this phone.
- Batteries are not included with the unit.
- The battery life is typically about 6 months, depending on usage.

When the battery is low  will flash in the middle on the right side of the display screen. If you do not replace the batteries, they will become totally discharged and your display screen will not work and you may lose all the telephone memories and settings.

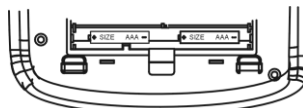

5 SETTING UP YOUR PHONE

Press the **SET/STO** button to enter the menu and then use **UP** or **DOWN** buttons to cycle through the following options:





- SET 1 DATE
- SET 2 LCD
- SET 3 FLASH














Note: The system will time out if you leave more than 8 seconds between key presses.

5.1 *Set Time/Date*









You will need to set the correct time and date so they can be displayed correctly on the display.

If you subscribe to a Caller Display service, the time and date will be set automatically on receipt of your first incoming call, but you may still need to set the correct year

1		IN STANDBY MODE, PRESS SET/STO BUTTON. ⇒ The display shows ' SET 1 DATE '.
2		Press SET/STO button to confirm. ⇒ The 'year' icon will be blinking"
3		Press UP or DOWN button to set the year
4		Press SET/STO button to confirm. ⇒ The 'month' icon will be blinking.







- 5  Press **UP** or **DOWN** button to set the month.

- 6  Press **SET/STO** button to confirm.
 ⇒ The 'date' icon will be blinking.
- 7  Press **UP** or **DOWN** button to set the date.

- 8  Press **SET/STO** button to confirm.
 ⇒ The 'hour' icon will be blinking.
- 9  Press **UP** or **DOWN** button to set the hour.

- 10  Press **SET/STO** button to confirm.
 ⇒ The 'minute' icon will be blinking.
- 11  Press **UP** or **DOWN** button to set the minute

- 12  Press **SET/STO** button to confirm the setting.
 ⇒ The display shows ' SET 2 LCD '
-  you can continue with programming,
 or press **DELETE** button to return to standby mode

5.2 Set LCD Contrast

- 1  In standby mode, press **SET/STO** button.
 ⇒ The display shows ' SET 1 DATE '
- 2  Press **UP** or **DOWN** button until the display shows 'SET 2 LCD'.

- 3  Press **SET/STO** to confirm.
- 4  Press **UP** or **DOWN** button to select your comfortable display viewing level
 (1~8). The default setting is 3.

- 5  Press **SET/STO** button to confirm the setting.
 ⇒ The display shows ' SET 3 FLASH '
-  you can continue with programming,
 or press **DELETE** button to return to standby mode

5.3 Set Flash Time

This telephone gives you the possibility to services of your network provider. When pressing the **RECALL** button, the phone interruption and the length depends on your Flash Time setting. The default value is 100ms, which is correct for most exchanges and should not need changing.

- 1  **In standby mode, press SET/STO button.**
⇒ The display shows 'SET 1 DATE'.
- 2  **Press UP or DOWN button until the display shows 'SET 3 FLASH'.**
- 3  **Press SET/STO to confirm.**
- 4  **Press UP or DOWN button to select 100 (default),300, 600, or 1000.**
- 5  **Press SET/STO button to confirm the setting.** The display shows 'SET 1 DATE', you can continue with programming
 ,or press DELETE button to return standby mode.

6 TELEPHONE OPERATIONS

6.1 *To answer a call*



When the phone rings;

Lift the handset or press the SPEAKERPHONE button on the Base unit.

⇒ The Call timer starts after going on line.

6.2 *Making a call*



Lift the Handset, listen for a dial tone

⇒ The display shows '00-00'.



**1 2 3
4 5 6
7 8 9
* 0 #**

Dial the telephone number you wish to call.

⇒ The display shows the number as you 14 digits dia l(maximum of will be shown).

To end the call, return the Handset to the Base unit.

6.3 *To end a cal*



Replace the Handset on the Base unit cradle or press the SPEAKERPHONE button on the Base unit.

⇒ The SPEAKERPHONE light indicator will turn OFF.

6.4 During a call

To adjust the handset volume



Adjust the volume of the handset to your comfortable volume level using the Handset volume switch located on the top cover of the Base unit

MUTE Function



During a call press MUTE button.

⇒ When the mouthpiece is muted, the person at the other end of the call cannot hear you but you can hear his side

To switch between the Handset and the Speakerphone



During a phone conversation through the Handset, press the SPEAKERPHONE button to speak hands-free.

⇒ The conversation remains through the Handset until the Handset is replaced on the Base unit cradle. Then the Speakerphone light will turn on. While in speakerphone mode, lift the Handset to switch off the Speakerphone and talk through the Handset.

To adjust the speakerphone volume



Adjust the volume of the speakerphone to your comfortable volume level using the SPEAKERPHONE volume switch located at the right side of the Base unit.

7 CALLER DISPLAY OPERATION

VERY IMPORTANT:

To use Caller Display you must first subscribe to your network provider's Caller Display service. If you subscribe to a Caller Display service, you can see the phone number of the person calling you before you answer. The caller display information includes:

- The caller's number (up to 14 digits)
- The date and time of the call

Condition of Incoming Caller Information	LCD Screen will display
It is a duplicate one	REP
It is a new one	NEW
A call from someone whose number is unavailable (for example an international call).	UNAVAILABLE
A call from someone whose number is withheld	WITHHELD
The caller Display is incomplete or corrupted	ERROR
Your have a new Voice Mail Message (This is a caller display service, but is not usually available from network providers.)	

7.1 Caller Display list

Telephone automatically stores the caller display information from the last 20 (14 digits) incoming calls. If new calls are stored, the New calls LED flashes and the display icon NEW is on with the number of new calls indicated.

The total number of calls is shown on the main standby screen by '00 CALL', '01 CALL' or 'XX CALLS'. If a call is received when the Call list is full, then the new entry will replace the oldest one.

Viewing the Caller Display list

1



In standby mode, press UP or DOWN button.

⇒ The display shows the most recent record.

If there are no Caller Display records, the display will show End.

2



Press UP or DOWN again to scroll to the next Caller Display

**To return
a call**



When the Caller Display record is displayed. Lift the handset or press the SPEAKERPHONE button on the Base unit.

⇒ The phone automatically dials out the displayed record.

**To delete Caller
Display record**



When the Caller Display record is displayed. Press DELETE button to delete the Caller Display record.

⇒ The display shows the next caller displayed record.



Press and hold DELETE button 3 seconds, all the Caller Display records will be deleted.

⇒ The display automatically return to standby mode.

8 OUTGOING CALL LIST

The KXT480 automatically stores the number(up to 16 digits) and duration of the last 20 calls made

**Viewing the
outgoing calls
list**

1



In standby mode, press OUT/P button

The display shows the most recent dialed call.

⇒ If there are no outgoing records, the display will show END

2



Press OUT/P again to show the duration of that call.

Press OUT/P repeatedly to step through each call record in turn.

To redial a call



When the outgoing record is displayed. Lift the handset or press the SPEAKERPHONE button on the Base unit.

⇒ The phone automatically dials out the displayed record

**To delete an
outgoing call
record**



In standby mode, press OUT/P button repeatedly until the display shows the outgoing call record you want to delete. Press DEL button to delete the outgoing record.

⇒ The display shows the next outgoing record



Press and hold DEL button for 3 seconds to delete all the outgoing call records.

⇒ The display automatically returns to standby mode

9.1 Direct memory M1, M2, M3

Storing a Number in M1, M2, M3 memories	1		<p>In standby mode, key in the telephone number you wish to store. ⇒ Up to a maximum 14 digits</p>
	2		<p>Press SET/STO button. ⇒ The display shows the SAVE -.</p>
	3		<p>⇒ Press M1, M2 or M3 button to store it in the selected memory</p>
To delete direct memory records	1		<p>To delete a number from a direct memory (M1-M3). In standby mode, press the (M1-M3) button ⇒ The display shows the memory number.</p>
	2		<p>Press the DEL button to delete the stored number. ⇒ The display shows dEL - -.</p>
Dial out Stored number	1		<p>Lift up Handset or press the SPEAKERPHONE button press M1, M2 or M3 buttons.</p>
	2		<p>⇒ The number dials automatically</p>

9.2 Two-touch memory 0-9

Storing a Number in (0-9) two-touch memories	1		<p>In standby mode, key in the telephone number you wish to store. ⇒ Up to a maximum 14 digits</p>
	2		<p>Press SET/STO button. ⇒ The display shows the SAVE -.</p>
	3		<p>Press the (0-9) button to store the number in the selected memory.</p>
To delete two-touch memory records	1		<p>To delete a number from a two-touch memory(0-9). In standby mode press the button(MEMO) ⇒ The display shows the LoAd -.</p>
	2		<p>Key in the memory location number (0-9). ⇒ The display shows the memory number</p>
	3		<p>Press the DEL button to delete the stored number ⇒ The display shows dEL - -.</p>
Dial out Stored number (0-9) two-touch memories	1		<p>Lift up Handset or press the SPEAKERPHONE button</p>
	2		<p>Press the MEMORY button(MEMO) ⇒ The display shows LoAd -</p>
	3		<p>Key in the memory location number (0-9). ⇒ The number dials automatically.</p>

9.3 Inserting a Pause in the dialing sequence





For some switchboard systems, an access number must be dialed (usually an 8 or 9) to get another dial tone and an outside line, before dialing the rest of the number.

Press the PAUSE [C/P] button after the access number and then dial the rest of the number you require. This will insert a pause of about 3.6 seconds between the access number and the rest of the number.

9.4 Use on PBX



If you are using your KXT480 phone on a PBX, and the PBX user guide tells you to press **RECALL**; Press **R (RECALL) button on your phone**

10 LAST NUMBER REDIAL

- 1  **Lift the Handset or press the SPEAKERPHONE button on the Base unit.**
Press  button.
- 2   The phone automatically dials the last number you called (maximum of 32 digits).

11 RINGER VOLUME

The Ringer High-Low switch located at the back of the Base unit allows you to adjust the volume of the ringer

- 1  **Low volume**
- 2  **High volume**

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

EC Declaration of Conformity