

Easiphone M170 Mobile User Guide



OPERATING ELEMENTS

- 1 Display
- 2 Left Softkey (Function is displayed on the left bottom of the display)
When making calls „hands free“ on / off
- 3 Take a call, in Standby mode: Open list of all calls
- 4 Digit keys 0 - 9
- 5 Star key, 2 x short press = „+“ for international prefix
3 sec. = Silent
- 6 SOS (emergency call) button
- 7 LED torch, press button „0“ 3 sec.
- 8 Earpiece
- 9 Right softkey (function is indicated at the bottom right of the display),
in Standby mode: Phone book
- 10 Navigation button (up / down / left / right) and „OK“ button
Quick links: Up = Sounds, Down = Calendar,
Left = Write SMS, Right = Alarm
Under „Settings“ → „Phone“ → „Shortcuts“ you can set the
assignment of the navigation keys individually.
- 11 End/Reject calls. In menu: Return to Standby mode, in Standby mode:
Press and hold to switch phone on/off
- 12 Hash key for 3 sec. = Keylock, Aa1 text input switch
- 13 Charging socket
- 14 Headphone Jack
- 15 Microfon
- 16 Mini USB port
- 17 Speaker
- 18 Battery compartment cover
- 19 Battery
- 20 SIM
- 21 Charger

ENGLISH

Operating Instructions

- Please read and observe the following information and keep the operating manual nearby for future reference!



WARNING!

Safety information

- Risk of explosion!
- ➔ Only use the power adapter plugs supplied!
- ➔ Only use batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use batteries as described.
- ➔ Never use standard and rechargeable batteries together.
- ➔ Never use rechargeable batteries or standard batteries with different capacities or charge statuses together.
- ➔ Never use standard or rechargeable batteries which are damaged.
- Risk of fatal injury with heart pacemakers!
- ➔ Always keep the phone a safety distance of at least 15 cm to heart pacemakers.
- Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- Risks to health and the environment from batteries!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.

ATTENTION!

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

- Note that you may need certain services from your cellphone provider to enable this provider before you can use it.

INTENDED USE

This mobile phone is designed for telephoning, surfing the internet and sending / receiving SMS texts when connected to a mobile phone network. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

PACKAGE CONTENTS

1 mobile phone, 1 li-ion battery, 1 operating manual, 1 charger

STARTING UP

Inserting the SIM card and battery

- ATTENTION!**
- The SIM card could be damaged.
 - ➔ Pay attention that the SIM card remains clean and undamaged.
Insert the SIM card the correct way around.
 - The battery or phone could be damaged.
 - ➔ Pay attention that the battery is inserted correctly.

Switch the mobile phone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.

Remove battery compartment cover, insert SIM card, insert battery, replace battery compartment cover



Charging the battery

- Charge the battery for at least 12 hours when charging for the first time and ensure they are subsequently discharged and charged fully. This aids a long service life of the battery.
Place the mobile phone in the charger or use the mini USB port.

SET THE DISPLAY LANGUAGE

- ➔ <Menu> <Settings> OK
<Phone> OK <Language> OK [Select language]
Done

CALLING

- Call**
➔ [Enter the phone number] Number is dialed

Answering a call

- ➔

Ending a call

- ➔

Call from the call list

- ➔ [Select an entry]

MENU STRUCTURE AND FUNCTIONS

PHONEBOOK

Options

- ▶ Add new contact ▶ Edit contacts

TOOLS

- ▶ Calendar ▶ Calculator ▶ Alarm ▶ Services

SETTINGS

● Sounds

● Phone

- ▶ Date & Time ▶ Language ▶ Display (Wallpaper, Screen auto lock, Power on display, Power off display, LCD backlight) ▶ Shortcuts ▶ Flight mode

● Calls

- ▶ Call waiting ▶ Call divert ▶ Call barring ▶ Line switching ▶ Advance settings

● Security

- ▶ SIM ▶ Phone (Phone lock, Change password (Manufacturer PIN: 1122))

● Restore settings

- (NOTE: Reset to the factory settings lost all personal settings! The data in the SIM card memory are still intact.)

SOS

- ▶ On / Off ▶ Numbers (You can specify up to 5 numbers) ▶ Voice message (Default or Custom) **The message can be up to 10 seconds.** Press SOS emergency call button 3 sec. to send emergency message

CALLS

- ▶ Missed ▶ Dialed ▶ Received ▶ Delete call logs

MESSAGING

- ▶ Write message ▶ Inbox ▶ Drafts ▶ Outbox ▶ Sent messages ▶ SMS settings

Service hotline

In the case of technical problems, contact our Service hotline. Switzerland: Tel. 0900 00 1675 (national charges, Swisscom at time of going to print: CHF 2.60/min). In the case of claims under the terms of guarantee, contact your sales outlet.

Maintenance

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

Guarantee

SWITEL equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase. All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defective parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer. If your device does show signs of a defect within the period of guarantee, please contact the sales outlet where you purchased the SWITEL device, producing the purchase receipt as evidence. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Disposal



In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to the laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container. The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!



You are legally obliged to dispose of power packs and batteries at the point of sale or in the corresponding containers provided at collection points by local public waste authorities. Disposal is free of charge. The symbols indicate that the batteries must not be disposed of in normal domestic waste and that they must be brought to collection points provided by local public waste authorities. Packaging materials must be disposed of according to local regulations.

Declaration of Conformity



This device fulfils the requirements stipulated in the Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity. Conformity with the above mentioned directive is confirmed by the CE mark on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site www.switel.com.

Technical data (All rights reserved)

Feature	Value
M 170 BRAVO Quad-band GSM (850/900/1800/1900 MHz)	
W x H x D	51 x 112 x 15 mm
Weight	76 g (incl. battery)
Talking time	max. 300 min.
Standby	300 h
Battery	Li-ION 3,7 V 800 mAh / 2,96 Wh
SAR	Head: 0.253 W/Kg
Display	1,77" Colour display